



OWNER'S MANUAL

INSTRUCTIONS AND SPARE PARTS

FASTCUT 34
20 to 30 HP



FASTCUT 32
17.5 to 21.5 HP



Greenfield Mower Pty Ltd


PO Box 162, Warminster, QLD, Australia 4110 Phone: (07) 3875 9400 Fax: (07) 3875 9425

E-MAIL: info@greenfieldmowers.com.au WEB: www.greenfield.com.au

19/11/14

Genuine Greenfield Attachments


Genuine Greenfield attachments are Australian designed and manufactured by us right here in Brisbane, Australia to the same stringent standards as our ride-ons. Discover how much more versatile your Greenfield can be with genuine, inexpensive Greenfield attach

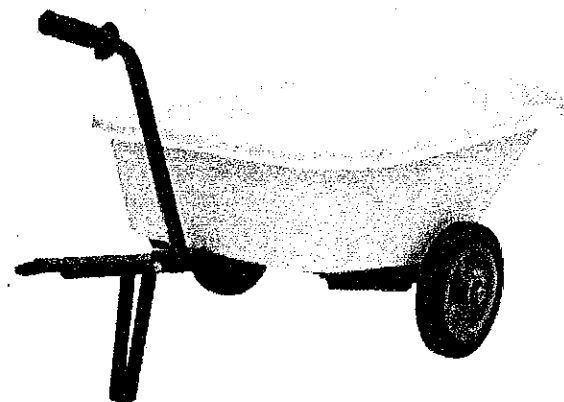

The Greenfield Barrow Trailer is ideal for the home gardener. Its impact resistant polypropylene tub can't rust or deform and when fitted with the optional extra lifting handle (as shown) can be used away from the machine.



Tip Trailer

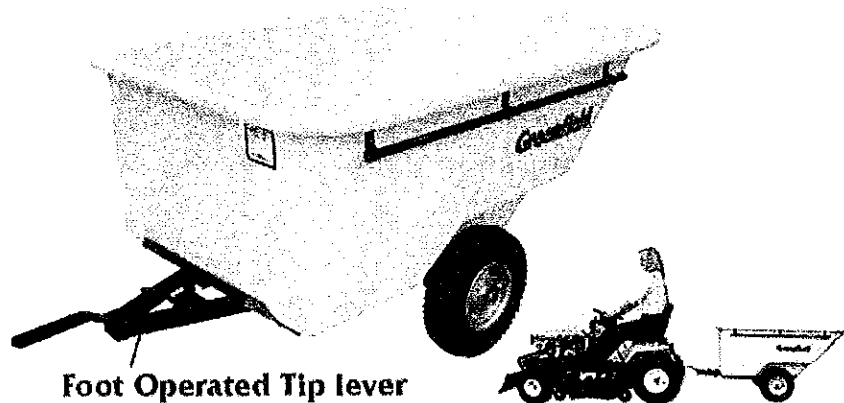


Foot Operated Tip lever

Take the effort out of acreage maintenance with the Greenfield (11 cu.ft - 300L) Tip Trailer. It has been specifically engineered by Greenfield for all the Fastcut series. Made of impact resistant polypropylene, can't rust or deform and is leak proof. Use it to bath the dog.


Our commitment to Greenfield ownership ensures that inexpensive locally made spare parts are always available right back to our first models produced in 1966



The Greenfield dozer blade eliminates all the back breaking shovel work around your property. The heavy gauge 36" (915mm) blade attaches rigidly to the Fastcut chassis and adjusts for height making light work of top dressing, garden maintenance and all those chores you've been avoiding.

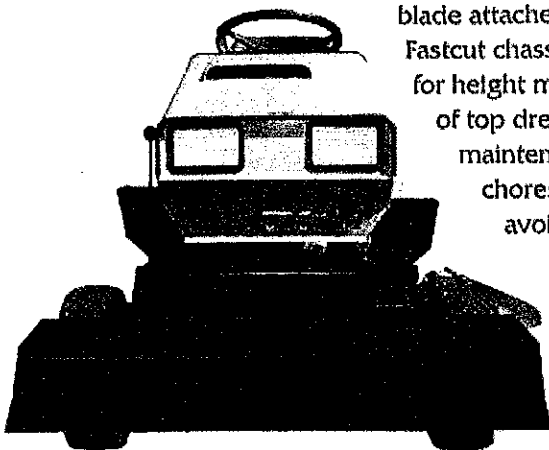

Dozer Blade

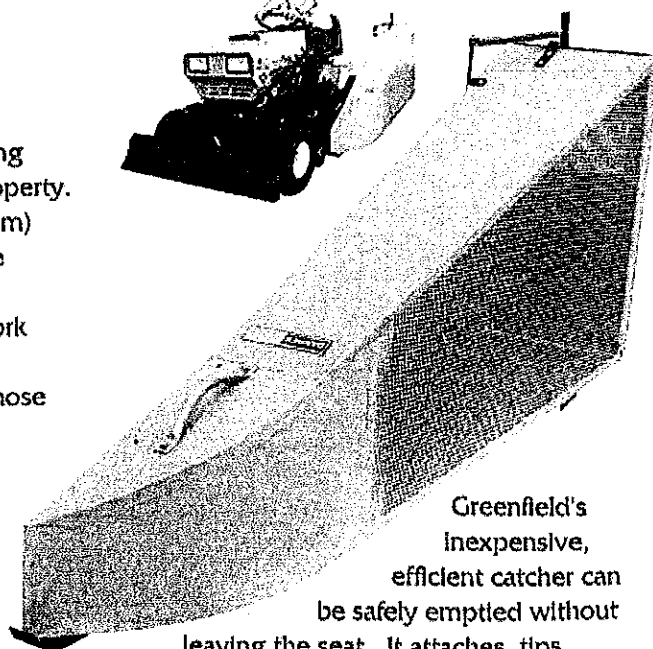

Greenfield's Inexpensive, efficient catcher can be safely emptied without leaving the seat. It attaches, tips to empty and detaches within seconds and without tools. Complete zinc coated metal construction for years of reliable rust free service in lawn mowing conditions.

Barrow Trailer

Tip to Empty Catcher

Contents

Safety Instructions	2
Operating Instructions	4
Mowing on Slopes	6
Differential Instructions	7
General Maintenance	8
Braking System	10
Cutting System	11
Drive System	14
Steering Adjustment	15
Chain Adjustment	16
Electrical Circuits	17
Spare Parts	
Idler Pulleys - Drive belt	18
Linkages - Cutter Clutch and Drive Clutch	19
Linkages - Brakes, Cutter Height and Notch Bar	20
Engine and Electrics	21
Drive Clutch and Rear Axle	22
Steering and Front Axle	23
Cutter Deck	24
Body Work and Seat	25
Service History	26
Warranty	28
Notes & Records	29



All details are correct at time of printing but are subject to change without notice.
GT 22010 1007

Thank you for buying an Australian made Greenfield tractor mower. Follow the manufacturers operating and maintenance instructions and many years of excellent trouble free service can be expected.

Before operating the mower read the owners manual carefully. Do not allow children or any person unfamiliar with the safe operating procedure to operate this mower. Your Greenfield mower has been designed to meet stringent safety standards – but we remind you that a mower is a cutting device – **used incorrectly it could cause personal injury or death.** Remove the key when machine is not in use.

Safety Instructions:

1. Testing seat switch.

ACTION - Park machine safely, sit on seat, apply park brake, set cutter engagement switch to off, start engine, switch cutter blades on, raise body off seat, but do not get off mower.

RESULT - Engine will begin to stop. Allow engine to fully stop. If the engine does not stop there is a problem with the seat safety switch. Do not attempt to use mower until you have your seat safety switch inspected by an authorised Greenfield Dealer.

2. Do not carry passengers.

3. Know your controls. Read the operating instructions carefully. Learn how to stop the mower and engine quickly in an emergency.

4. Do not mow whilst people, especially children or pets are in the mowing area. Children should be kept elsewhere and supervised. Never assume that children will remain where you last saw them. Do not reverse before looking behind.

5. Make sure the area to be mowed is clear of sticks, stones, bottles, bones, wire and other debris that could be thrown by the blades.

6. Do not operate the machine without first inspecting the blades, blade bolts and blade holder for wear or damage. Damaged blades and worn bolts are major hazards. Always replace blades and blade bolts in sets to preserve Balance. Replace worn or damaged parts with genuine Greenfield replacement parts only. Use of inferior non-genuine service parts on your Greenfield mower could result in costly damage and even personal injury. Refer "Maintenance Instructions" for replacement part numbers and fitting instructions.

7. Before using, check that the grass catcher, safety switches and guards provided by the manufacturer are operating properly and fitted securely. Regularly check all the components on the mower to ensure the machine is in a safe operating condition.

8. Never mow while barefoot or wearing open sandals or thongs. Wear long trousers and heavy shoes. It is also important to wear suitable eye and hearing protection.

9. A mower operator should be in good physical and mental health and not under the influence of any drug or alcohol which might impair vision, co-ordination or judgements.

10. Replace worn or faulty exhaust mufflers.

11. Do not allow grass, garden debris or grease to build up on the mower, particularly around the engine. These could be a fire hazard.

12. Petrol is a highly inflammable fuel. If ignited it could cause destruction of property, serious personal injury or death. Refuel outdoors only over a non-flammable surface. Do not smoke while refuelling engine or fuel near a source of ignition such as electrical switches or a gas hot water heater. Never remove the cap of the fuel tank or add petrol while the engine is running or if the engine is hot, allow it to cool for several minutes. Remove fuel cap slowly to relieve any tank pressure. Do not fill past the maximum level on the fuel tank. If petrol is spilled do not attempt to start the engine but move the machine away from the area of the spill and avoid creating any source of ignition until any build up of grass clippings and garden debris is removed from the machine, all trace of the spill is removed and all petrol vapours have dissipated.

13. Use only an approved container for storing fuel. Never store the fuel container or the fuelled machine in an unventilated area or near a source of ignition such as electrical switches or a gas hot water heater.

14. Do not operate the engine in a confined space where the poisonous exhaust fumes (carbon monoxide) can collect.

15. Always disengage the cutting blades before starting or stopping the engine.

16. Always mount or dismount the mower from the opposite side to the discharge chute. Always stop the engine before dismounting. Keep feet and hands clear of the cutter deck.

17. Reduce speed particularly when making sharp turns to prevent overturning or loss of control. Do not stop or start suddenly when mowing up hill or down hill. The differential action must be locked out when operating on any slope to improve traction, braking and safety.

18. Never mow uphill or down hill on slopes which exceed 10 degrees, or mow across the face of a slope which exceeds 5 degrees. Before attempting to mow on any slope, refer to "Mowing on slopes" on page 6 in this Owners Manual.

19. Stay alert for holes in the terrain and other hidden hazards.

20. Before crossing paths, driveways or any other area foreign to mowers, reduce engine speed, disengage cutting blades and lift cutting attachment to maximum height. Do not drive over obstacles or gutters, this machine has a maximum 3 1/2" (9cm) clearance.

21. Watch out for traffic when crossing or operating the mower near roadways. Always mow with the safety grass deflector properly fitted.

22. When mowing, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation.

23. Before leaving the operators position:

- (a) Disengage the cutting blades
- (b) Apply the parking brake
- (c) Stop the engine and remove the starter key

24. Disengage the drive to the cutting blades and stop the engine:

- (a) Before refuelling
- (b) Before removing the grass catcher or any attachment
- (c) Before making a height adjustment unless adjustment is being made from the operators position
- (d) Before clearing blockages
- (e) Before inspecting, cleaning or working on the mower
- (f) After striking a foreign object (inspect the mower for damage and make necessary repairs before restarting And operating the machine)
- (g) If the machine starts to vibrate abnormally (check immediately)

25. Disengage the drive to the cutting blades when not in use or transporting.

26. Do not over-speed the engine or alter the governor settings. Excessive speed is dangerous and shortens engine life.

27. Use care when pulling loads or using attachments

- (a) Use only the approved drawbar hitch point
- (b) Limit loads to those you can safely control
- (c) Do not turn sharply. Use care when backing up.

28. Replace any unreadable warning or safety decals.

29. Do not lend or sell the mower without the owners manual.

30. Warning – Remove spark plug lead to avoid accidental starting before attempting any maintenance or inspection of the mower.

Operating Instructions:

Before Starting

PLEASE DO NOT PROCEED BEFORE READING SAFETY INSTRUCTIONS (PAGE 2)

Fuel

Top with clean regular **Unleaded** petrol only. **Do Not Overfill.** Don't fill above the high level mark on the tank. Make sure the petrol is free from impurities, particularly water. The petrol tank is located inside the engine compartment of our Greenfield mower. Raise the bonnet for access. Before removing the filler cap from the fuel tank to refuel the machine, wipe or brush the area clean around the cap to prevent any dirt or debris accidentally falling into the tank when the cap is removed. Do not use stale petrol in your mower, add clean fresh fuel only. Refer "Safety Instructions" on page 2 regarding fuel safety and fire hazards.

Engine Oil

Check oil level by positioning the mower on level ground. Wipe or brush the area clean around the oil filler/dipstick cap, remove the dipstick and wipe clean, replace the dipstick screwing correctly into position. Remove again and sight the oil level. Fill to the full mark. Do not overfill. The dipstick must be firmly in place when the engine is running. Refer to the "CRANKCASE LUBRICATION" in the maintenance section of this manual for oil recommendations.

Tyres

Inflate to the correct pressures. 20 to 22 psi (140 to 154 KPa) in the front tyres and 12 to 15 psi (84 to 105 KPa) in the rear tyres. Do not over inflate. Over inflation will change the shape of the tyre adversely affecting the cutter Trim & Tilt and may also cause permanent tyre damage resulting in tyre rupture and possible accident.

Cutting Height

The cutting height adjustment lever is located in the rear cover in front of the operator. To alter the cutting height, move the lever to the right then shift upward or downward to select the setting then release to lock in position. An indicator panel displays the setting. Use the height settings in the green band for maximum belt life.

Blade Clutch

The blade clutch switch is located on the right hand side of the dash panel. To **ENGAGE** the cutter blades, pull the switch **up**. To **DISENGAGE** the cutter blades push the switch **down**.

DANGER:

- When Cutter Clutch is engaged, high-speed blades are rotating.
- Never use the mower without the safety deflector or grass catcher fitted.
- Never attempt to dismount from the driver's seat while engine is running.

Seat

The operator's seat is adjustable front to rear. To adjust push the lever on the left hand side of the seat to the left and slide the seat forward or backward until a safe and comfortable seating position is obtained, then release the lever to the locked position. Oil the slides occasionally. The seat is fitted with a safety switch (see page 2 for testing procedure.)

To Start the Engine

Apply the park brake, disengage the blade clutch (Cutters Out). Turn on fuel tap (if fitted). For cold starting, the choke will need to be activated. On single cylinder models, move the throttle control lever up and into the **CHOKE** position. On twin cylinder models fitted with a separate choke control, move the throttle control to the **FAST** position and pull out and hold the choke control in the **CHOKE** position. Turn starter key to the start position, ten seconds maximum, to avoid overheating the starter motor. If engine does not start it may be flooded. Set throttle control half way and try again. Make sure to return the key to the **RUN** position after the engine starts or each time you attempt to start it. Once the engine is running move the throttle control to the **FAST** position on single cylinder models to turn off the **CHOKE**. On twin cylinder models with a separate choke control push the **CHOKE** in fully for correct engine operation.

Important – This Greenfield mower is fitted with a safety "cut-out" switch activated by the seat. The operator must be seated to start the engine and remain seated while operating the mower. If the operator does not remain seated the engine will stop. This safety switch must be kept functional for your protection. Adjustment is easily done if ever necessary.

To Stop the Engine

In an emergency situation, turn the key to the "STOP" position.

For a normal stop, reduce the engine speed to idle on the throttle control, disengage cutter blades. Apply the park brake and allow engine temperature to even out by idling approximately 20 seconds. Turn the key to the STOP position.


NOTE: Some manufacturers require their engines stopped in a different manner, i.e. Briggs & Stratton recommends their single cylinder engines be shut down at full revs. Refer to the engine manufacturers book supplied with this machine for their recommended engine stopping procedure.

Only after the mower, the engine, and all mechanical functions of the mower have completely stopped should the driver dismount from the drivers seat.

Remove the key and store out of the reach of children. This will also ensure that the hour meter will not continue to run on and power to the electric fuel solenoid valve on the carburettor is shut off.

To Operate

A simple pivoted multi-purpose foot pedal operated by the drivers right foot Controls forward, neutral and reverse. Apply toe pressure to move forward, Heel pressure to move in reverse, increased toe or heel pressure provides speed Variation in forward or reverse respectively. Allow pedal to centralize for neutral. The manufacturer also recommends this multi-purpose pedal to be used as the principal method of braking when operating this mower. On level ground or moving forward down hill, the mower can be slowed or stopped by applying toe or heel pressure opposite to the directional movement of the mower. When moving forward uphill, regulating the forward pedal pressure will slow or stop the mower. Sudden or violent directional changes and / or wheel spinning must be avoided. For a detailed explanation of the braking systems on this Greenfield Fastcut mower see also the section on "Braking Systems" in this book.

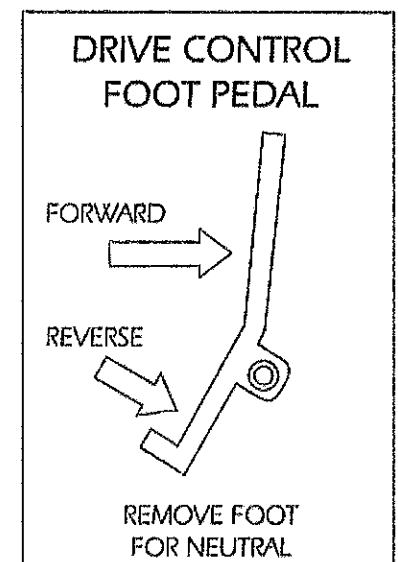

Safe Operating Hint

Recommended method to proceed down a slope:

Before driving down a slope, shift the throttle control to select slow engine revs. Using toe pressure keep the multi-purpose foot pedal engaged in the "forward" drive position while driving down the slope. This will limit the forward speed of the mower to the preselected engine speed. To further adjust the ground speed to suit the conditions use the throttle control to raise or lower the engine revs while still retaining the necessary toe pressure on the foot pedal to keep forward drive engaged. This practise eliminates the unnecessary wear and tear to clutches, transmission and tyres caused when reverse is used to slow the forward progress of the mower on slopes. This practise also ensures the operator retains better control of the machine as engaging reverse in certain circumstances such as wet grass could cause the wheels to skid, which may result in loss of control. Reverse or heel pressure will be needed to stop the mower.

IMPORTANT: Never drive a ride-on mower up or down a slope exceeding 10° or across a slope exceeding 5°.

IMPORTANT NOTICE REGARDING ELECTROMAGNETIC CLUTCH FITTED TO YOUR GREENFIELD MOWER

Burnishing in of the clutch is important to increase the life of the Electromagnetic Cutter Clutch. Please follow these instructions:

To burnish a clutch, reduce the engine speed to about half, cycle clutch on and off with the cutter engage switch on the dash panel. A typical burnishing time will take anywhere from 5 to 30 cycles depending upon inertia. The burnishing frequency should be done at 2 to 6 cycles per minute.

Mowing on Slopes:

Exercise extreme caution when operating a ride-on mower on a slope. Slopes are a major cause of tip-over and loss of control accidents involving ride-on mowers. Severe injury or death can occur.

On any slope the differential action must be locked out for best traction and braking i.e. both rear wheels driving.

Speed should be reduced on slopes, particularly when changing direction.

Do not stop or start on slopes unless entirely necessary or make sudden speed or directional changes.

Never operate a ride-on mower on any slope if it is wet. Any grass in good condition on slopes can cause your ride-on mower to slide and cause the brakes to have little or no effect.

A ride-on mower should only be operated up and down slopes, not across.


Before operating on a slope remove all loose matter, branches, rocks etc. and stay clear of holes, erosion, tree roots etc. Such hazards can cause unexpected and instantaneous stability changes.

If a totally safe mowing procedure cannot be planned before entering a sloping area, then an alternative method of cutting the area, which does not risk the safety of the operator, should be used.

NEVER tow or use any optional attachment on ANY slope.

Don't mow close to steep drop offs.

MAXIMUM SLOPES

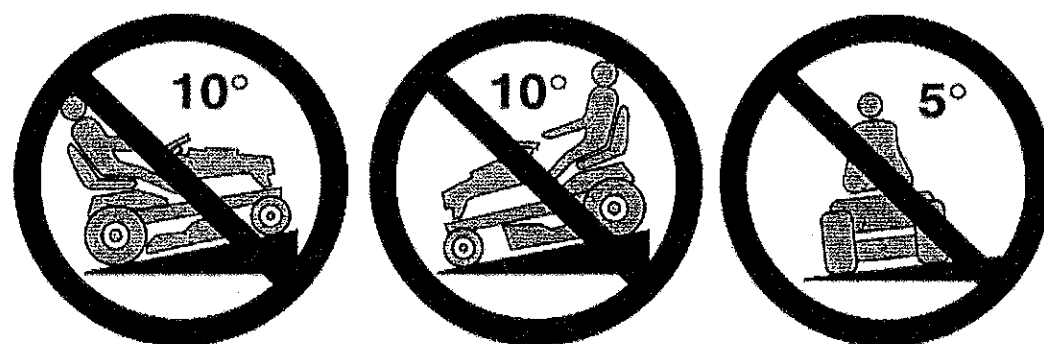

Never mow up hill or down hill on slopes which exceed 10 degrees.

Never mow across the face of a slope which exceeds 5 degrees

If the operator of a ride-on mower is not absolutely certain a slope does not exceed the previous recommendations, the area should not be entered until such time a properly qualified person has assessed and reported on the safety of the area.

Greenfield Differential:

Some Greenfield Fastcut models feature a unique and patented differential. This differential offers the operator the option of the full differential action of the rear wheels for improved steering and a tight turning circle, whilst eliminating rear wheel scuffing on fine lawns. Most people will operate their Greenfield mower with the differential operating all the time. This is the preferred method of operation and is accomplished by keeping the handle hooked over the end of the rear axle (see "A" below).


Important: Do not attempt to engage or disengage the differential lock from the operators seat or while the engine is running.

In situations, such as wet areas, uneven terrain, slippery surfaces and particularly when working on any slope, you must lock out the differential action i.e. "Both rear wheels driving" for improved traction and braking. This differential must also be locked out when using any attachment such as the dozer blade or when towing. Locking the differential is accomplished by releasing the handle from the end of the rear axle (see "B" below). Slight movement of the mower with the front wheels other than straight ahead may be required to engage the locking mechanism.

To return the differential to the operating position (see "A" below) turn the steering wheel either to the left or right. Rock the mower back and forth while simultaneously pulling out the engagement handle and locating it over the end of the axle. Lubricate if necessary.

If the left side rear wheel is removed, make sure the keyed engagement block slides freely into the square section of the engagement plate before the final tightening of the wheel nuts.

Greenfield differentials are fully lubricated and sealed for life at the factory. If in the unlikely event that your differential needs service, it must be returned to Greenfield intact. Differentials that have been tampered with or dismantled will **NOT** be considered for warranty. Normal warranty is 24 months for private use and 3 months for commercial use. Extended warranty is available for up to 5 years for private use. See your Greenfield dealer for details. During the warranty period, service and spares for differential are only available through the factory. The factory gives a same day service if a differential is returned.

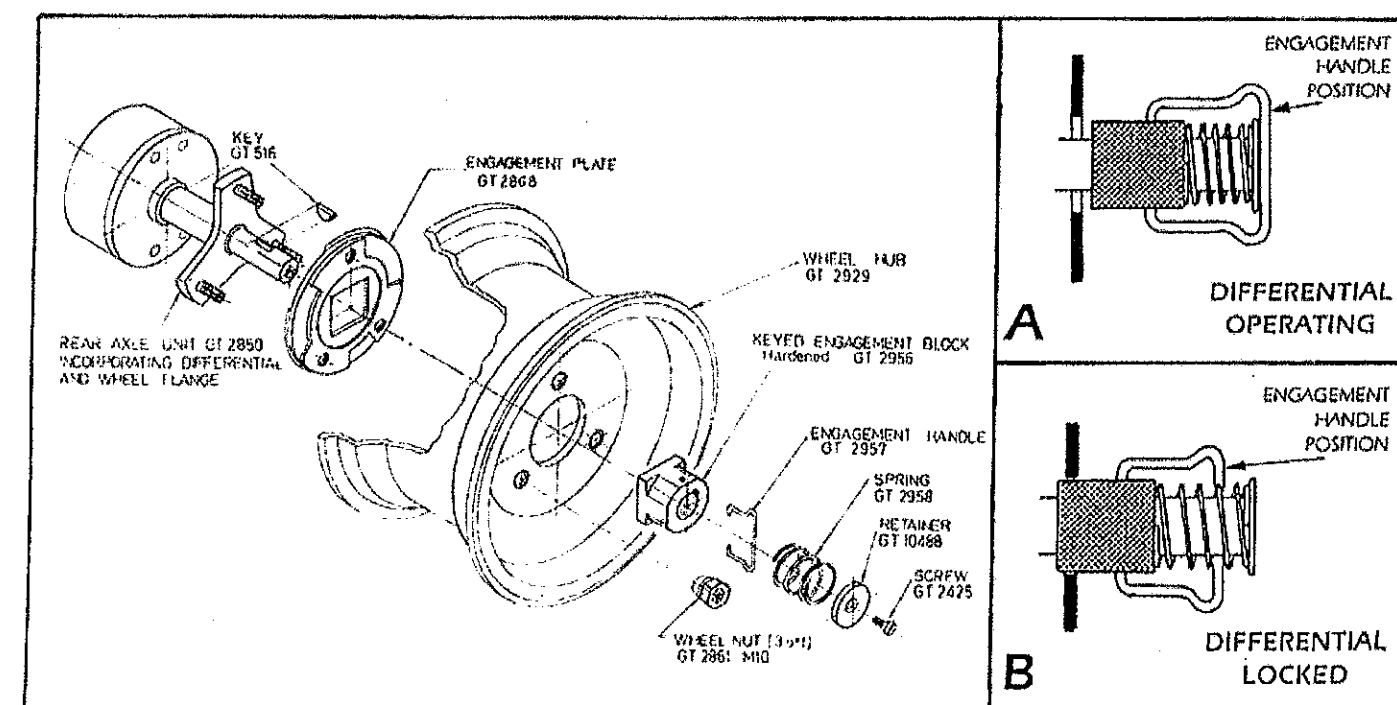

Maintenance:

Warning: Remove the spark plug lead to avoid accidental starting BEFORE attempting any maintenance or inspection of the mower.

Crankcase Lubrication

Change engine oil after the first 5 hours of operation then every 6 months or 25 working hours, whichever comes first. Change more often in heavy work or dusty conditions. Drain engine oil whilst engine is warm then replace with a high quality detergent oil classified for service SF/SG by the A.P.I. Refer to the engine manufacturers book supplied with this machine for the specific grade required for this engine. Briggs & Stratton recommends "Warranty Certified" SAE 30 oil, available from Briggs & Stratton service dealers.

Fill to full mark indicated on the dipstick. Do not overfill. To check oil level, position the mower on level ground. Wipe or brush the area clean around the oil fill/dipstick cap, remove the dipstick and wipe clean. Replace dipstick screwing correctly into position. Remove again and sight the oil level. Top up as necessary. The dipstick must be firmly in place when the engine is running. Refer to the engine manufacturers booklet for specific oil recommendations.

Air Filter

Service the air filter as per the engine manufacturers booklet. Clean or replace more often in dusty conditions. Never operate the engine without the filter correctly and securely fitted – rapid and expensive wear to the engine will occur.

Cooling System

Remove the blower housing and clean out the grass and debris to prevent engine overheating. Refer to the engine manufacturer's booklet.

Battery

To maintain the correct fluid level in the battery, top up with distilled water only, to the high level shown on the battery.

NOTE: If the mower is not used for at least 5 hours a month the battery will discharge and could sustain permanent damage. Do not allow the battery to discharge. Regularly trickle charge with a current not exceeding 3 amps per hour for 3 to 4 hours to prolong battery life. Keep the outside of the battery, especially the terminals clean and dry and check the battery is held securely.

The maintenance of the battery is the customer's responsibility and only faulty batteries are covered by warranty. Neglect is not covered.

Dry Battery

When initially charging a new DRY battery, each cell must be filled to the high level with an electrolyte (dilute sulphuric acid) with a specific gravity of 1.26 at 20° to 30°C. The battery must then be allowed to stand for 30 minutes before charging at a rate not exceeding 5 amps for 3 hours.

Warning: Persons not trained in the proper procedure to transfer fluids containing acid or do not have the necessary safety equipment on hand in case of a spill or exposure, should not attempt this procedure. Contact the battery manufacturers local agent or an authorised Greenfield dealer.

Wheels

The rear wheel nuts should be re-tensioned after the first 5 hours of operation to 44Nm (33ft lbs) then regularly with your preventative maintenance checks. Before re-tensioning the L.H. rear nuts on models fitted with differentials make sure the keyed engagement block slides freely into the engagement plate.

Tyres

Inflate to the correct pressures. 20 to 22 psi (140 to 154 KPa) in the front and 12 to 15 psi (84 to 105 KPa) in the rear tyres. Do not over inflate. Over inflation could damage the structure of the tyre and permanently change its shape. Over or under inflation will also adversely affect the cutter deck trim and tilt.

Cutter Deck

Regularly check the condition of the cutter blades and blade bolts, the cutter disc, V belt and pulleys and the cutter brake. Refer to specific sections in this book for further details regarding blades, V belts etc.

Cleaning

Never wash your Greenfield mower with a high-pressure wash gun. Water and dirt could be blasted past the seals in the bearings causing premature bearing failures and rusted pivot points.

- Never wash your Greenfield mower immediately after use. The quenching contraction effect from hosing the machine while at operating temperature could also draw water and dirt into the bearings and cause premature bearing failures.
- The best way to clean your Greenfield is to use an air hose to blow loose grass, etc from around pulley's, belts and the top of the cutter deck. Wash the exterior with a sponge and bucket, then rinse off with a hose and wipe it down the same way as you would your car. For maximum machine life, do not spray water directly on the pulley's and bearings. Recoil all pivots after washing.
- Allow your Greenfield to cool after use then clean off all grass and other debris before storing. Sticks, stones or an accumulation of grass and other debris will damage belts and fracture pulleys if they go between the pulley and belt. When operating in these conditions the cutter deck may require more frequent cleaning.

Chassis Lubrication

Your Greenfield mower has 3 greasing points. A grease nipple is fitted to each king pin housing in the front axle beam, the third grease nipple is fitted to the steering idler which is located in the centre of the machine close behind the front axle beam and accessible from under the chassis. Grease these locations every 6 months or 50 operating hours with a quality No. 2 lithium base grease or equivalent. It is recommended your grease gun be fitted with a flexible hose for easier access. All other exposed pivot joints, lever points and slides are to be lubricated with engine oil.

Belts

"V" belts on Greenfield mowers are self-adjusting although the cutter belt may occasionally require an extra manual adjustment within its working life (see page 12). Inspect the "V" belts regularly and replace if damaged. Part numbers for "V" belts are:

Drive V belt – GT 2354

Cutter V belt – GT 2365

Important – For long service life, use only Genuine Greenfield branded V belts, refuse substitutes. Non genuine V belts may render the clutch ineffective, even dangerous.


Cutter Blades

Check condition of blades, blade bolts and blade holder. Replace if damaged or worn. Damaged or worn blades and bolts are major hazards. Always replace damaged or worn blades and bolts in sets to preserve balance. Use only Genuine Greenfield branded replacement parts. Use of inferior non genuine replacement parts on your Greenfield mower could result in costly damage or even personal injury. The part number for blade and bolt set is:

Cutter Blade and Bolt Set – GT 2139

Illustration A shows fitting procedure for cutting blades. Tighten the blade bolt nuts firmly. Use a 17mm ring spanner. The correct torque is 44Nm (32ft lbs). The blades must be free to move but not loose. Lightly oil the blade pivot point before fitting.

Warning: Always remove the spark plug lead to avoid accidental starting.

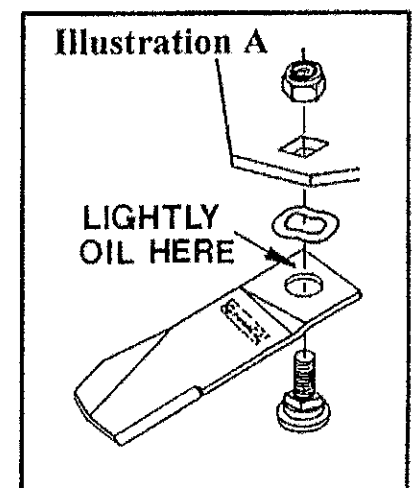

Greenfield Fastcut Braking Systems:

This Greenfield ride-on mower is equipped with a multi-purpose **Drive/Brake Control Pedal**, operated by the driver's right foot. It also has an **Emergency Brake** operated by the left foot and a hand operated **Parking Brake**. All three systems are completely independent of one another.

The manufacturer recommends the pivoted **Drive/Brake Control Pedal**, operated by the drivers right foot should be used as the principle method of braking when operating this mower. The **Emergency Brake** operated by the drivers left foot should only be used in an emergency i.e. if the drive/brake pedal ceases to function for any reason. The **Parking Brake** should only be engaged after the machine has come to a stop although this brake can also be used in an emergency if both other systems have failed.

The recommended **Drive/Brake** system incorporates two large and very durable low speed clutches that control forward, reverse and stopping as selected by the driver. This **Drive/Brake** system will provide excellent and trouble free service for all driving and braking requirements for many years under normal conditions.

The **Emergency Brake** operated by the drivers left foot engages a disc brake on the mowers rear axle. Disc brakes require expendable brake pads to slow the rotation of the brake disc. If used only as an emergency brake, as the manufacturer intends, this brake will not require replacement brake pads for many years, if ever. If however, this brake receives continual use the brake pads will quickly wear requiring regular adjustments and periodic brake pad replacement. Under no circumstances should the Emergency Brake be applied whilst the driver is simultaneously activating the Drive/Brake pedal. As with all Greenfield mowers the warranty covers faulty workmanship and materials. Consumable items such as brake pads are not included in the warranty.

As with any brakes they become less effective in wet conditions and can lose grip on well grassed areas particularly if the grass is in a lush condition or wet. Therefore it is very important to read and understand all the Safety Instructions included throughout this book and particularly the section titled **Mowing on Slopes** that indicates, amongst other important information, the maximum degrees of slope that mowers should be operated on.

IMPORTANT: Read and understand all the safety and operating instructions in this book. Know your controls. Be sure the area that you are about to enter has no concealed hazards and does not exceed a 10-degree incline.

Brake Pad Wear Adjustment


Periodically test the Emergency Foot Brake. If adjustment is required follow the instructions below. The adjusting screw is located on the brake arm and bears against the sliding brake pad. As the brake pads wear, the brake disc is free to centralise between the sliding pad and the fixed pad. This adjusting screw compensates for wear on both pads and can be adjusted as described below.

- Remove the spark plug lead to prevent accidental starting.
- The adjusting screw is positioned at the rear of the mower up inside the chassis. Access is easier if the rear of the mower is elevated slightly e.g. place rear wheels on 30cm blocks. Ensure mower cannot roll.
- Loosen the locknut and screw in the adjusting screw until the brake pads have minimum clearance on the brake disc and are not binding.
- Tighten the locknut while holding the adjusting screw stationary.
- Check that the brake disc rotates freely between the pads then replace the mower onto the ground. Replace the spark plug lead.

Brake Pad Replacement

- Follow steps A & B of "Brake Pad Wear Adjustment"
- Remove the pad retainer shaft.
- Remove both brake pads by sliding down from rear of mower.
- As the new pads will be thicker it will be necessary to release the lock nut and screw out the brake pad adjusting screw.
- Fit the new brake pads.
- Refit the pad retainer shaft.
- Readjust the adjusting screw following steps "A to E" of "Brake Pad Wear Adjustment". See Illustration "B".
- Oil all Pivots. **Do Not Oil Brake Pads or Disc.**

Illustration B

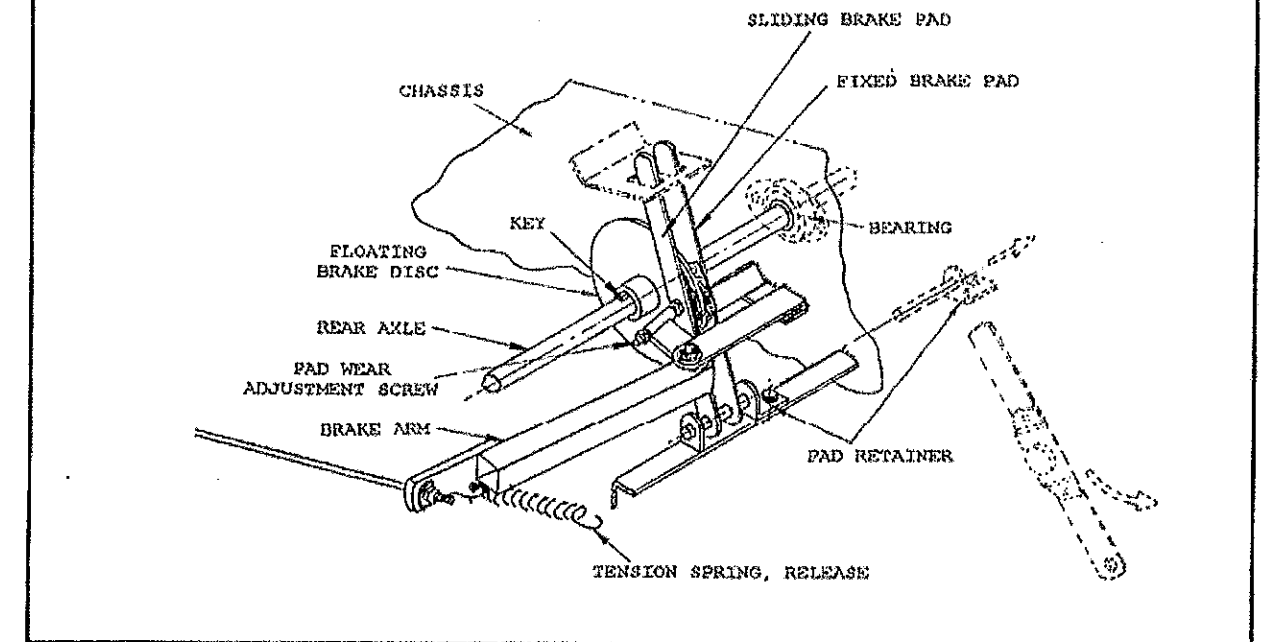


Cutting System:

Cutter Deck Adjustment

Before checking "TILT" which is the forward slant on the Cutter Deck from front to rear or "TRIM" which holds the Cutter Deck level side to side, first check the tyres are inflated to correct pressures, the front axle beam is level in the chassis and all four wheels are on the same level flat surface.

- Remove the spark plug lead to prevent accidental starting.
- Disengage blade clutch (Cutter Out).
- Set the "Trim" by adjusting the trim adjusting nuts located on the top lifting arms of the Cutter Deck.
- Set the "Tilt" by loosening the tilt adjusting bolts, which connect the bottom lifting arms to the Cutter Deck side plates. Set the deck to the correct tilt (minimum 6mm lower at the front) then retighten both bolts. See illustration "C" on next page.

Illustration C

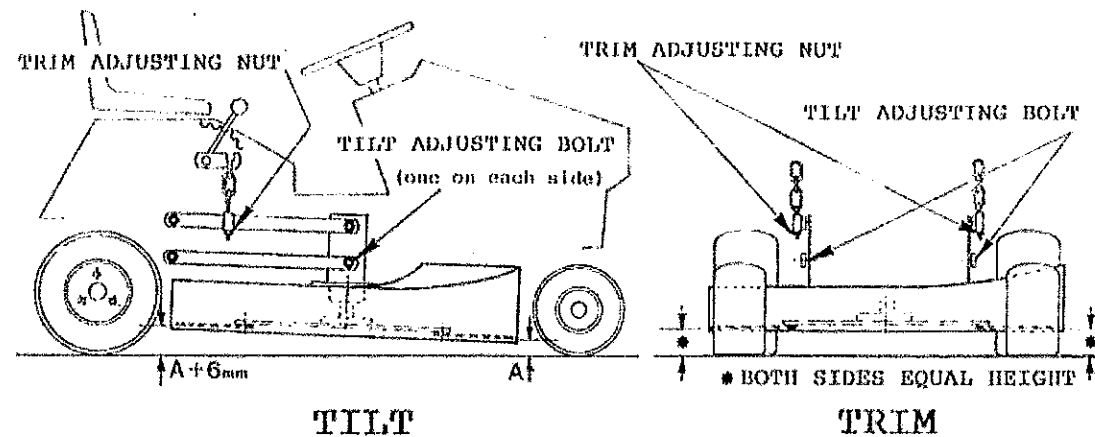

Cutter Belt Adjustment


Warning: Remove the spark plug lead to avoid accidental starting BEFORE attempting any maintenance or inspection of the mower.

The self-adjusting belt tensioner will automatically adjust to compensate for normal wear and stretch of the V belt. However as most belt stretch occurs during the early operating hours of the new belt, the first adjustment should be checked after approximately 5 hours of operation with further checks at 6 months or 50 hour services. Belt tension can easily be adjusted at the fixed idler pulley.

The fixed idler pulley has 7 bolt hole positions available plus a sliding adjustable base. To adjust the belt using the fixed pulley bracket, disengage the cutters then loosen the two nyloc nuts on the pulley bracket base and slide the bracket rearward and retighten the nuts, or relocate the pulley to the next rearward hole.

The manufacturer recommends all Greenfield mowers be returned to an authorised Greenfield dealer for normal servicing i.e. oil changes, air filters etc. at the times indicated in the maintenance section of this book and by the engine manufacturer. The manufacturer also recommends a preventative maintenance and safety inspection be performed every 6 months or every 50 working hours by an authorised Greenfield dealer to comply with the conditions for both standard and extended warranty offered by the manufacturer. Refer to the manufacturers warranty leaflet.

Illustration D

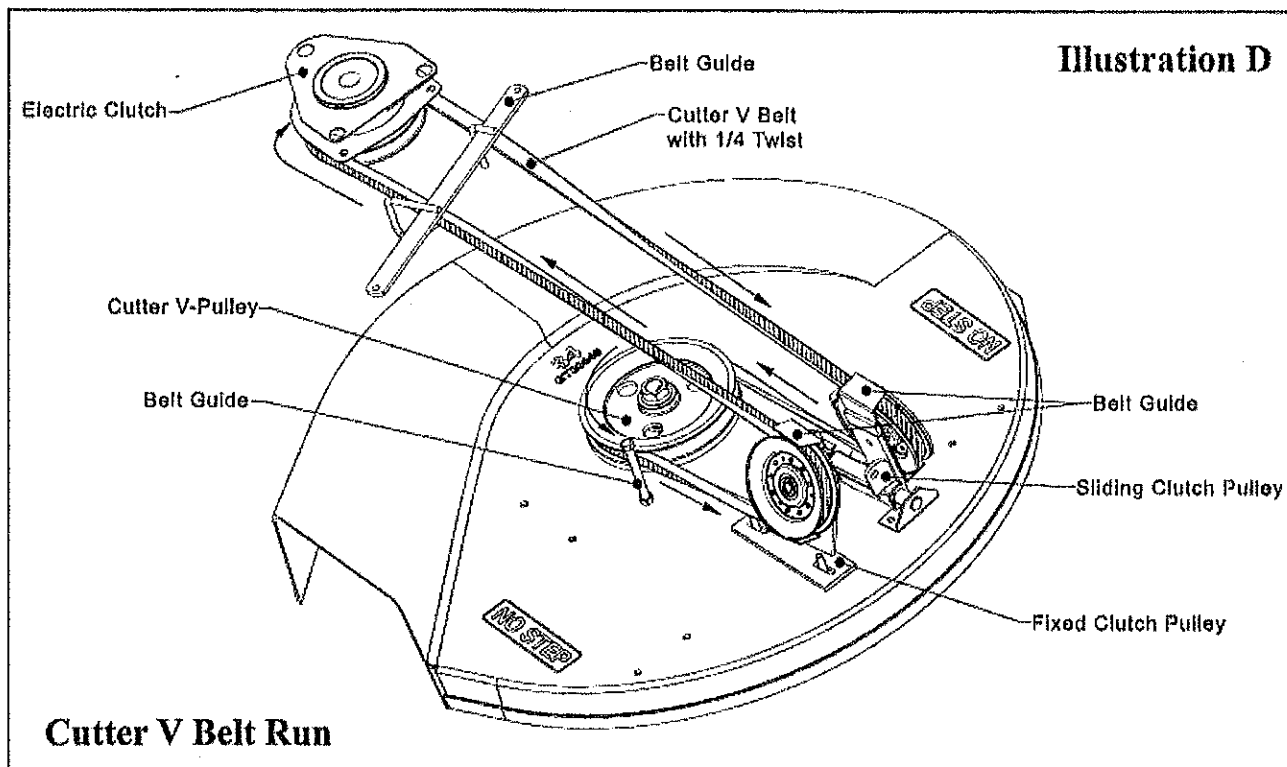

Cutter V Belt Run

To Remove Cutter V Belt


1. Remove the spark plug lead to prevent accidental starting.
2. Lower the blade height to the "LOW" position.
3. Check the blade clutch is disengaged, "SWITCH OFF".
4. Remove the V Belt from the engine pulley.
5. Undo the centre bolts and remove the sliding clutch pulley and belt guard and the fixed clutch pulley and belt guard.
6. Remove the V Belt from the cutter spindle pulley and remove the V Belt from the machine.

To Replace The Cutter V Belt

1. Remove the spark plug lead to prevent accidental starting.
2. Lower the blade height to the "LOW" position.
3. Check the blade clutch is disengaged, "SWITCH OFF".
4. Fit the V Belt to the cutter pulley by manoeuvring the belt around the pulley.
5. Refit the idler pulley assemblies to the mounting brackets as follows: Insert the bolt through from the back of the bracket. Position the belt guard over the bolt and engage on the bracket (ensure the correct guard is used – left and right sides are different – compare to illustration). Place the bearing adaptor over the bolt, large end first. While holding the V Belt into the pulley groove slide the pulley over the bolt and bearing adaptor and into the belt guard. With the wings of the belt guard over the belt and pulley refit the washer and nyloc nut. See illustration. **IMPORTANT:** Before progressing to the next step, check that both pulleys spin freely inside the belt and belt guards when the cutter clutch is disengaged.
6. Fit the V Belt to the engine pulley bottom groove of the engine pulley. Refer to illustration D showing cutter V Belt run.
7. Replace the spark plug lead.
8. From the operators seat run the engine and engage the cutters to check the V Belt operation. Refer to "Cutter Belt Adjustment"

Note – A belt run-in period is required as follows. With the height adjusting lever in the green band (mid height position) engage cutter blades and run for a minimum of ten minutes at medium engine speed. Ideally, a total run-in time would be approximately one hour, during which time you can cut grass, on a mid height position.

Illustration E



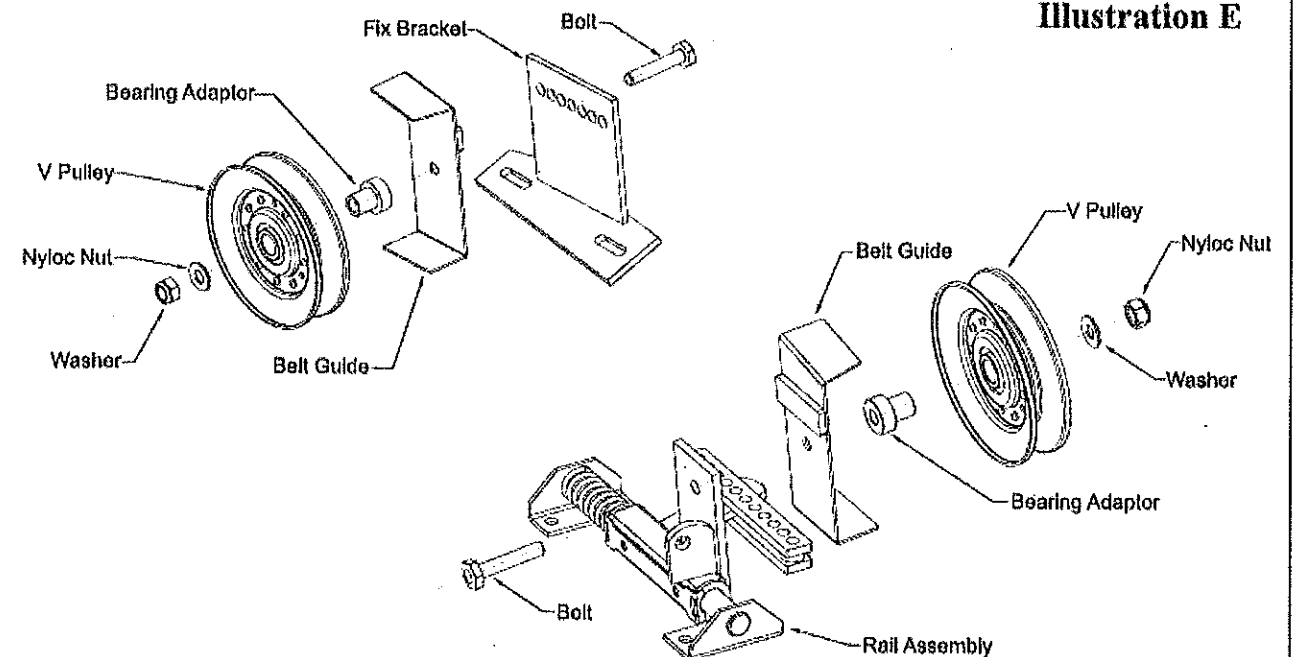


Cutter Belt Idler Pulley Assembly

Drive System:

To Remove Drive V Belt

1. Remove the spark plug lead to prevent accidental starting.
2. Remove the rear cover as follows – Lift up the seat and disconnect the wire to the seat cut out switch by separating the spade connector on the blue wire near the top of the battery. Undo the star knob at the top rear of the rear cover and position the height adjustment lever in a mid height position. Now remove the rear cover and seat assembly.
3. Set the blade height to the "LOW" position.
4. Swing back the steady bracket supporting the rear clutch link (Refer illustration F)
5. Remove the spring clip retaining the rear clutch link to the yoke. Lift off the rear clutch link and swing rearward (Refer illustration G).
6. With a spring release hook tool (See illustration H), remove the tension spring from the idler pulley notch bar.
7. Release the notch bar leaf spring by inserting a flat screwdriver through the slot in the bracket above the leaf spring. Lever the leaf spring clear of the notch bar and hold in a released position allowing the idler pulley to slide freely rearward to permit belt removal. (Refer illustration H).
8. To remove the drive V Belt from the engine pulley the cutter V Belt must first be removed. Follow steps 1 to 4 of "To Remove Cutter V Belt" instructions. Now remove the Drive V Belt from the engine pulley.
9. Lift the drive V Belt off both flat idler pulleys and remove the belt through the opening at the rear clutch link.

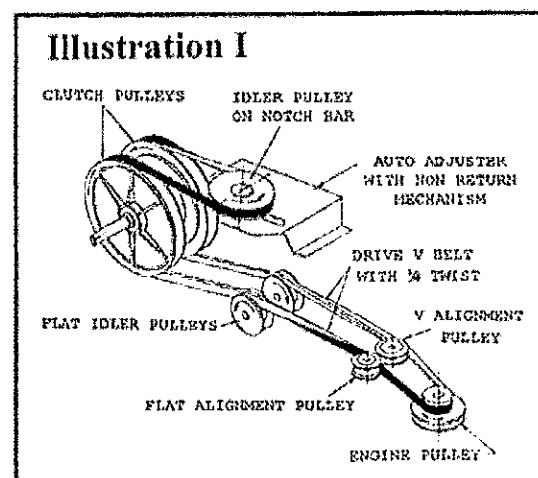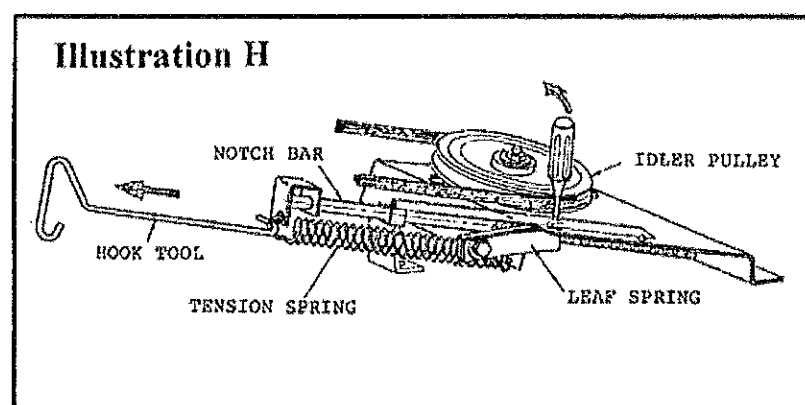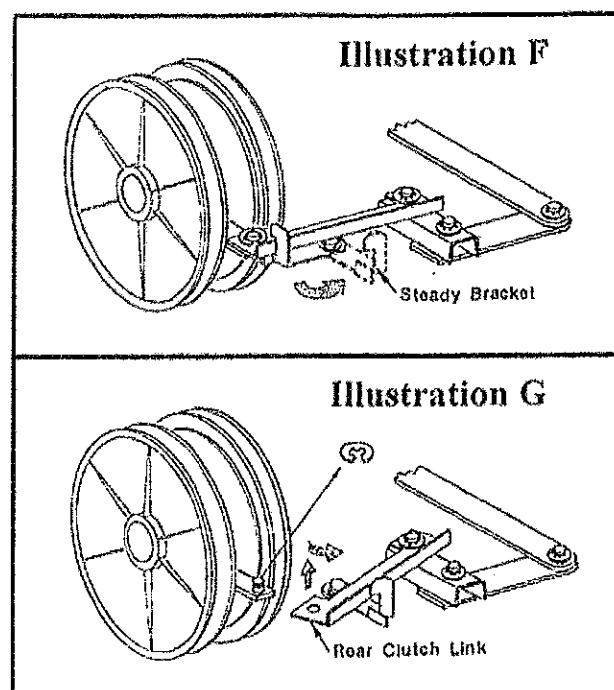


To Replace Drive V Belt

1. Feed enough belt down the back of the clutch pulleys to reach the engine pulley. Guide the belt over the cutter belt guide bar and underneath the engine pulley and into the top groove of the engine pulley. If the cutter V Belt is in position on the engine pulley, remove the belt by following steps 1 to 4 of "To Remove Cutter V Belt"
2. Place the belt around both the V and Flat alignment pulleys and over the two flat idler pulleys. Place the belt into both clutch pulleys then into the idler pulley on the notch bar. This pulley will need to be in the fully rearward position to fit the belt, then slide it forward. Lubricate the slide with grease before fitting the belt.
3. Check the belt is still correctly in place over both the alignment pulleys and both the flat idler pulleys. The back of the belt runs on all flat pulleys. (See illustration I).
4. Replace the notch bar tension spring using a hook tool.
5. Replace the rear clutch link and the spring clip.
6. Swing the steady bracket forward to support the rear clutch link.
7. Refit the Cutter V Belt by following steps 6 and 7 of "To Replace Cutter V Belt" instructions.
8. Replace the rear cover and reconnect the wire to the safety cut out switch for the seat.
9. Replace the spark plug lead.

Steering Stop Adjustment:

The steering stops "B" are readily seen and accessible from under the right hand side of the chassis with the cutter deck in the "LOW" position. Adjustments should not be necessary, unless the steering has been damaged.


1. Remove the spark plug lead to prevent accidental starting.
2. Check the front wheel alignment has 0-1.5mm toe in. Correct if necessary by resetting the adjustable tie rods. Also check that the steering wheel spokes are horizontal when the front wheels are in the straight-ahead position. Adjust the steering link if necessary. These adjustments must be completed before any steering stop adjustments are made.
3. Loosen the nuts retaining the two steering stops on the chain sprocket support. (Refer illustration J, item B).
4. Turn the steering wheel full lock to the right till the right hand king pin is hard against the fixed stop "A".
5. Slide the right side stop on the chain wheel support until it hits against the tie rod end "C". Retighten the locking nut "B".
6. Turn the steering wheel full lock to the left then repeat step 5 above.
7. To check your adjustments are correct, turn the steering wheel to either lock, noting stops "A" and "B" make contact at the same moment. This will ensure the smallest turning circle without unnecessary strain on the steering components.
8. Replace the spark plug lead.

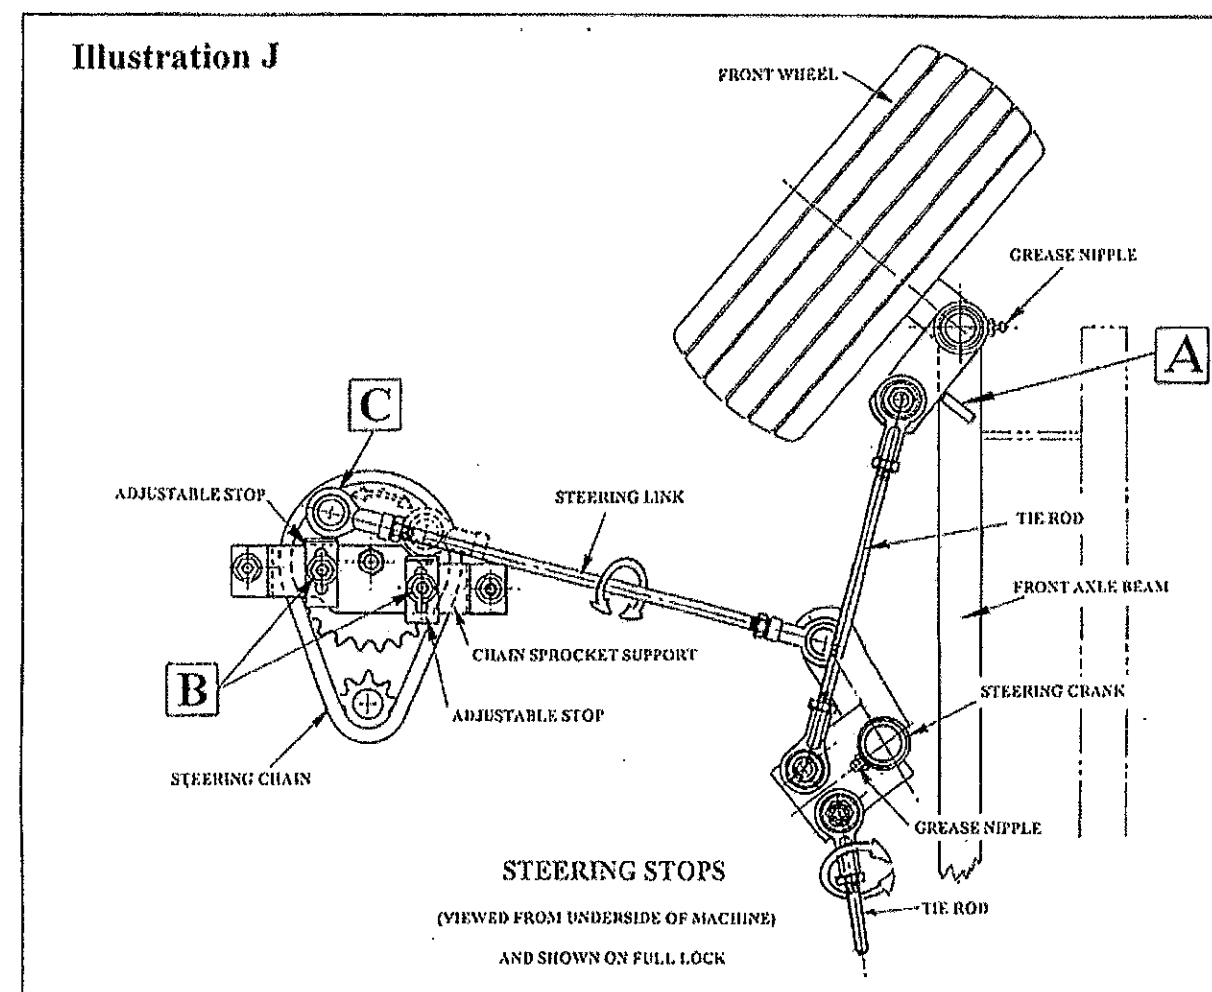


Chain Adjustments:

Steering Chain Adjustment

1. Remove the spark plug lead to prevent accidental starting.
2. Lower the cutter deck to the "LOW" position.
3. Working from under the bonnet at the rear of the engine, loosen both nyloc nuts on the steering shaft flangette bearing plates and the nyloc nut on the locking tab. See illustration "K".
4. With fingers only, push the steering shaft towards the left side of the machine to remove slack from the steering chain. Do not over tighten.
5. Re-tension the two nuts on the bearing plate and the nut on the locking tab.
6. Replace the spark plug lead.

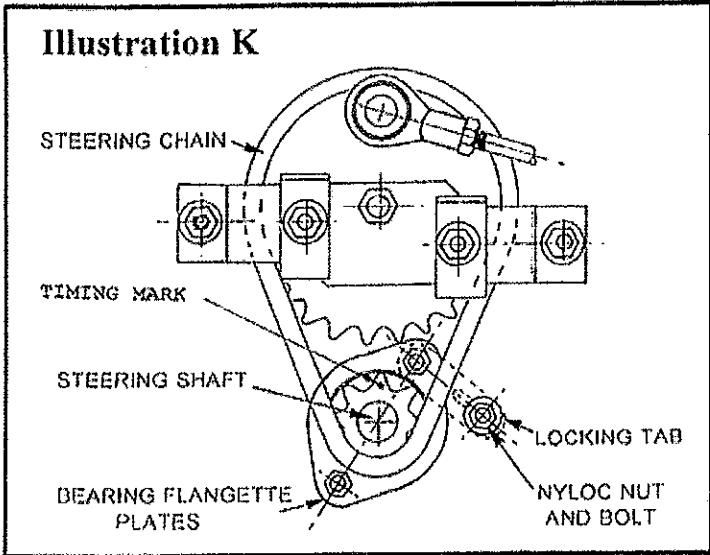

Steering Chain Adjustment
(Viewed from underside of machine)

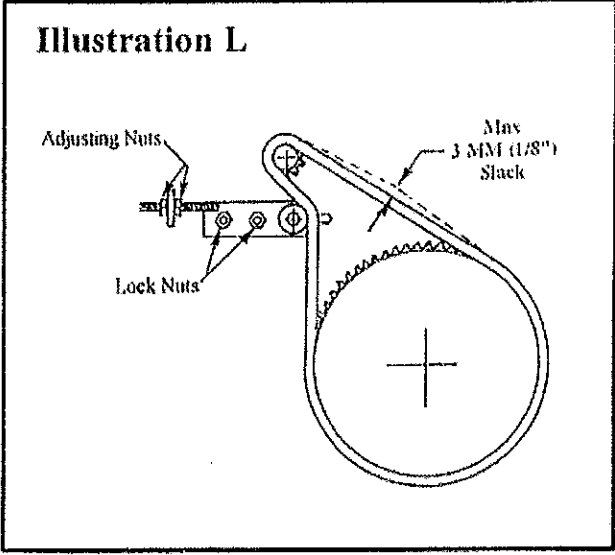


Drive Chain Adjustment

Rear Drive Chain Adjustment

1. Remove the spark plug lead to prevent accidental starting.
2. Remove the rear cover as follows - Lift up the seat and disconnect the wire to the seat cut out switch by separating the spade connector on the blue wire near the top of the battery. Undo the star knob at the top rear of the rear cover and position the height adjustment lever in a mid height position. Now remove the rear cover and seat assembly.
3. Loosen the two locking nuts on the chain adjuster mechanism, only enough to allow the mechanism to slide. Use a 14mm ring spanner or socket.
4. Undo the front adjusting nut on the screw adjusting mechanism, using a 13mm open-end spanner.
5. Using the same spanner adjust the back adjusting nut to take up excess slack in the drive chain. The chain is tensioned correctly when the slack has been reduced to approximately 3mm. Do not over tension. See illustration "L" above.
6. Retighten the two locking nuts. Recheck the chain tension. If necessary the procedure may need to be repeated and the adjusting nut backed off slightly to comply with the recommended chain tension.
7. Retighten the front adjusting nut.
8. Replace the rear cover, the star knob and reconnect the wire to the safety cut out switch for the seat.
9. Replace the spark plug lead.


Electrical Circuits:

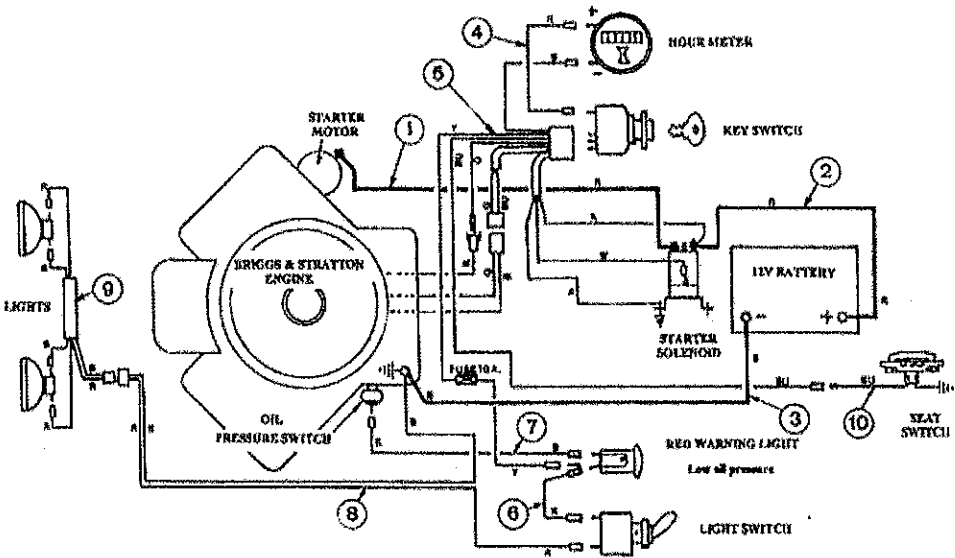


INDEX	PART NO	DESCRIPTION
1.	GT 6129	Red Cable - Sol to Starter Motor
2.	GT 14364	Red Cable - Battery to Solenoid
3.	GT 14370	Black Cable - Battery to Engine Ground
4.	GT 20219	Red Wire - Key Switch to Hour Meter
5.	GT 22047	Wiring Harness - Key Switch
6.	GT 20216	Red Wire - Warning Light
7.	GT 20215	Black Wire - Oil Switch
8.	GT 20197	Wire Harness - Light Switch
9.	GT 20196	Wire Harness - Headlights
10.	GT 22037	Seat Switch Harness

Colour Legend

B - Black
O - Orange
R - Red
W - White
Y - Yellow
G - Grey
BU - Blue

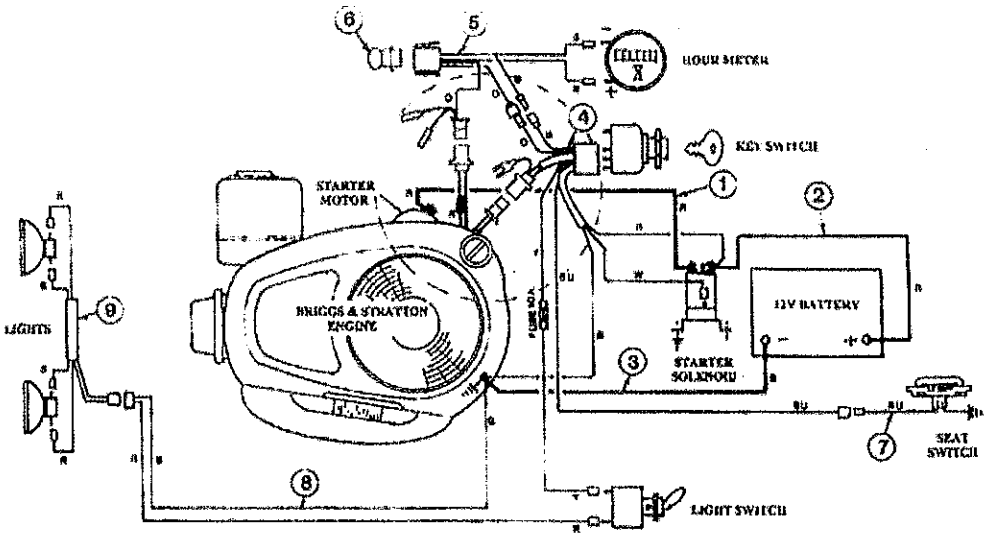


INDEX	PART NO	DESCRIPTION
1.	GT 6129	Red Cable - Sol to Starter Motor
2.	GT 14364	Red Cable - Battery to Solenoid
3.	GT 14370	Black Cable - Battery to Engine Ground
4.	GT 20198	Wiring Harness - Key Switch
5.	GT 20240	Wiring Harness - Charge, Hour Meter
6.	GT 20241	Plug in Unit - Diode & Capacitor
7.	GT 22037	Seat Switch Harness
8.	GT 20197	Wire Harness - Light Switch
9.	GT 20196	Wire Harness - Headlights

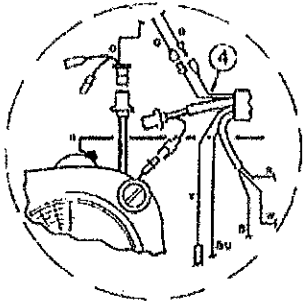

ALTERNATIVE
CONNECTION

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

Idler Pulleys – Drive Belt:

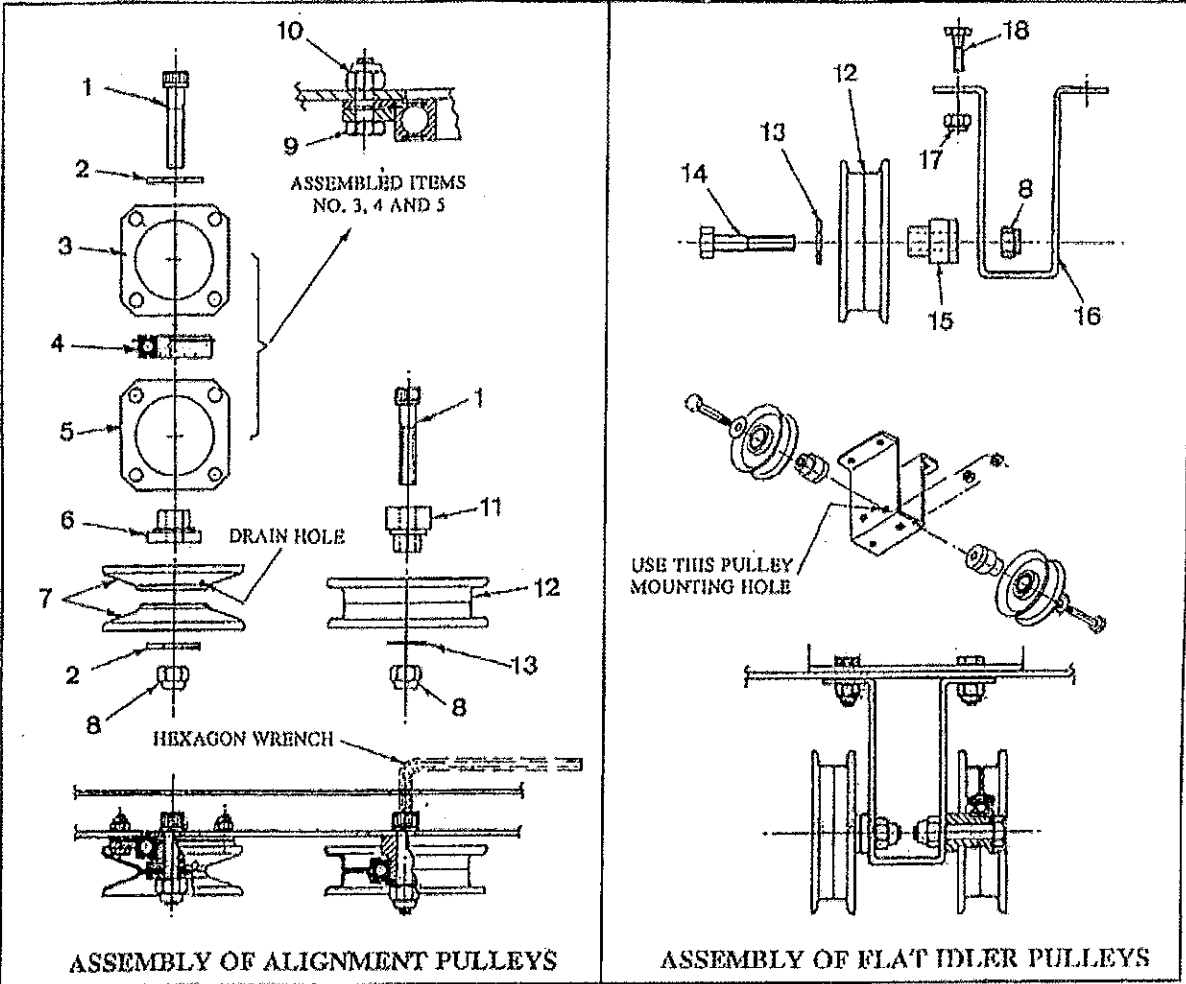

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	GT 2015	High Tensile Cap Screw	10	GT 22525	Nut plate assembly
2	GT 16317	Washer	11	GT 22002	Bearing Adaptor – Flat Pulley
3	GT 22152	Spacer Plate – Thin	12	GT 1009	Flat Idler Pulley – Complete
4	GT 2293	Ball Bearing with Snap Ring	13	GT 1012	Washer
5	GT 22153	Clamp Plate – Thick	14	GT 118	Bolt
6	GT 22001	Bearing Adaptor – V Pulley	15	GT 18050	Bearing Adaptor
7	GT 22154	“V” Half Pulley	16	GT 18312	Bracket
8	GT 2466	Nyloc Nut	17	GT 1020	Nyloc Nut
9	GT 1052	High Tensile Bolt	18	GT 1455	Bolt

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

TO REMOVE “V” ALIGNMENT OR FLAT PULLEYS

- Hold the H.T. cap screw firmly by using a 5/16” hexagon wrench inserted down a hole in the step through floor area.
- Remove the nyloc nut and washer from the end of cap screw – remove the pulley.


TO REMOVE THE “V” PULLEY BEARING

- First remove the pulley as above.
- Remove the four nyloc nuts securing the bearing, spacer and clamp plate.

TO REPLACE “V” PULLEY

- Replace in reverse order as for removal – install bearing first.
- Install bearing, spacer and clamp plate taking care that the snap ring in the bearing is uppermost and the thick clamp plate is under the ring. See illustration above. Tighten the four nyloc nuts firmly.
- Insert cap screw down through hole in floor making sure that washer item 2 is correctly positioned over top of bearing.
- Fit bearing adaptor, top and bottom pulley halves, ensuring the top pulley half has a water drain hole.
- Fit washer and nyloc nut and tighten firmly.


Linkages:

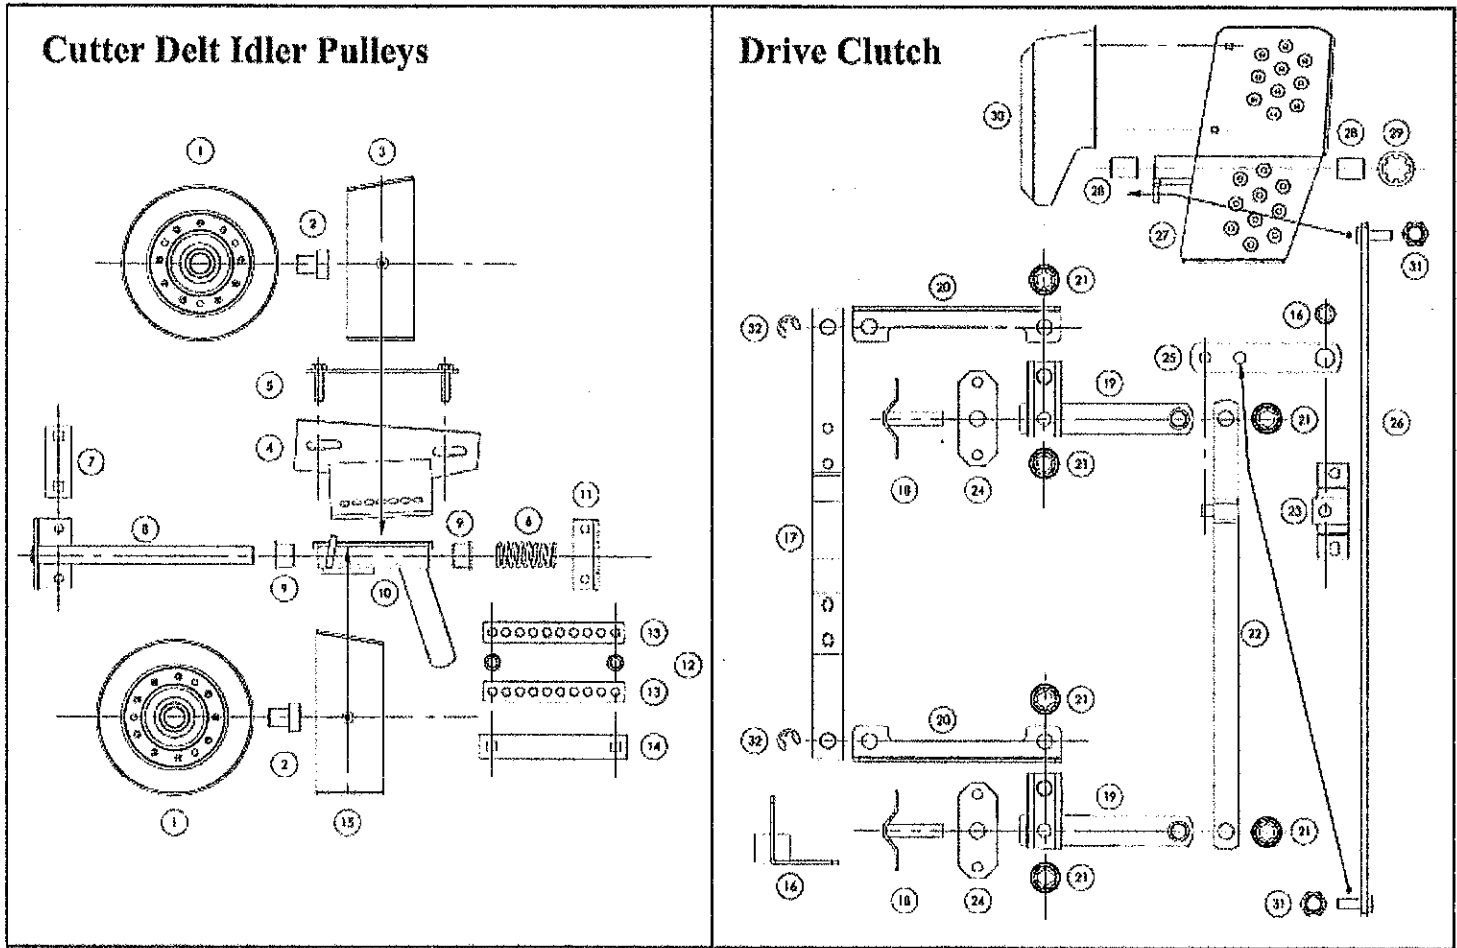

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	GT 2592	V Pulley & Bearing	17	GT 20945	Yoke Unit
2	GT 22039	Bearing Adaptor	18	GT 20395	Pivot Pin Assy
3	GT 13790	L.H. Belt Guide	19	GT 20405	Pivot Pin Assy
4	GT 18855	Fixed Pulley Bracket	20	GT 14309	Clutch Link
5	GT 13280	Retainer	21	GT 2057	Retainer
6	GT 22051	Spring – Compression	22	GT 18785	F – R Link
7	GT 21158	Retainer	23	GT 18337	Pivot Bracket
8	GT 22315	Rail Assy	24	GT 22151	Support
9	GT 1766	Bush	25	GT 18318	Link
10	GT 22355	Sliding Bracket	26	GT 20390	F – R Control
11	GT 13776	Bracket	27	GT 22305	Foot Pedal
12	GT 730	Bush	28	GT 12394	Bush
13	GT 14318	Bar	29	GT 580	Retainer
14	GT 21161	Retainer	30	GT 22156	Heat Shield
15	GT 13785	R.H. Belt Guide	31	GT 1484	Nyloc Nut
16	GT 23470	Steady – Clutch Yoke	32	GT 2036	Spring Clip

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.


Linkages:

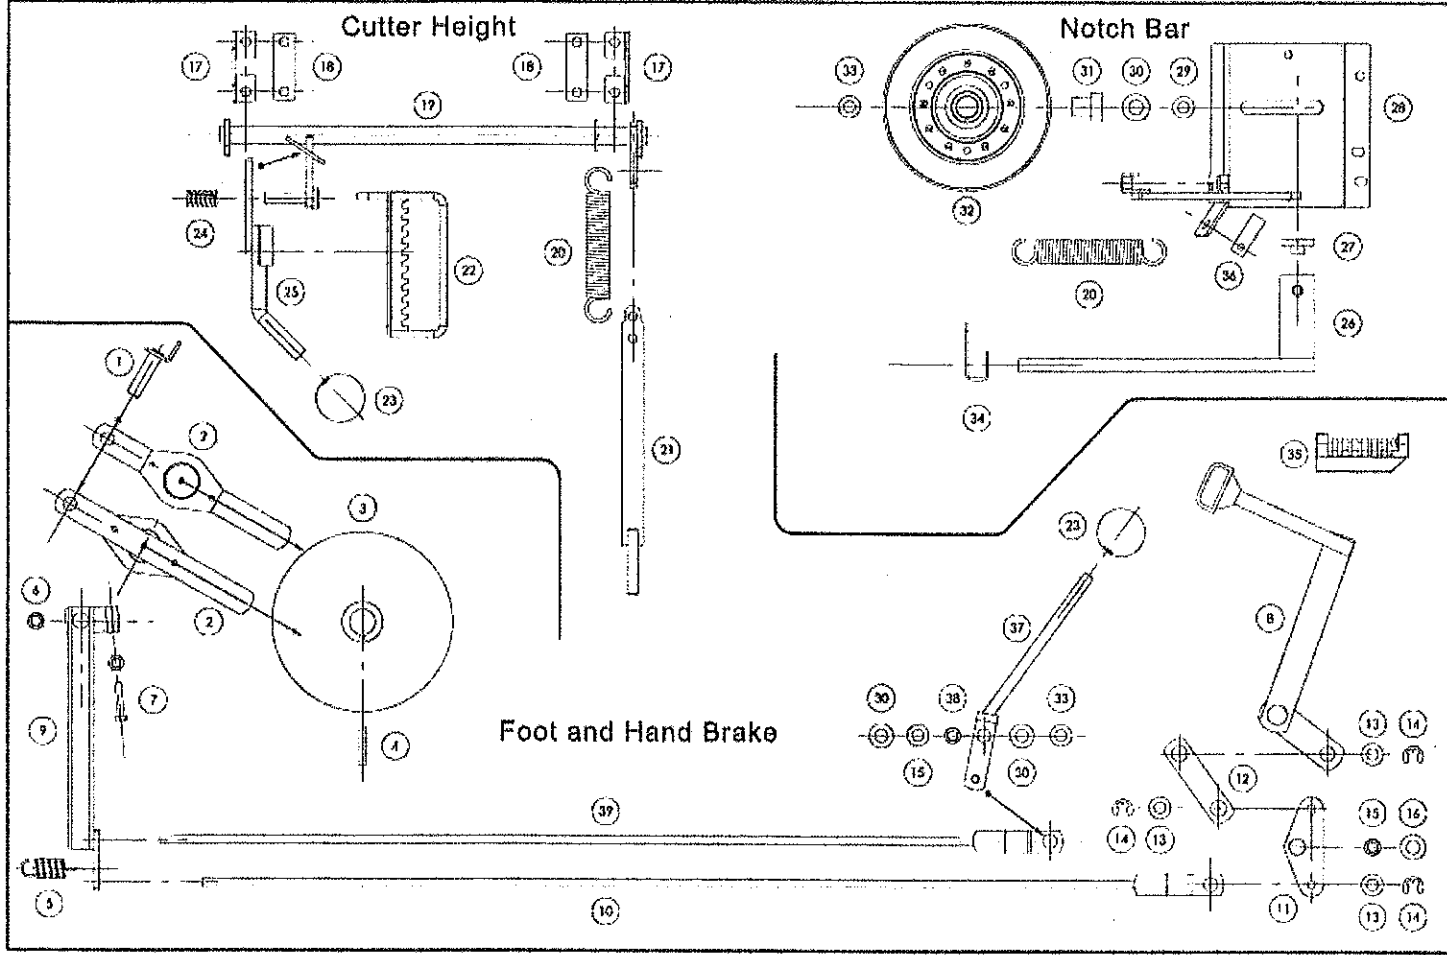

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	GT 15270	Anchor - Brake Pad	22	GT 21285	Height Adjuster Rack
2	GT 22920	Brake Pad Unit	23	GT 1565	Knob
3	GT 18660	Brake Disc	24	GT 7071	Spring -- Compression
4	GT 12093	Key	25	GT 18705	Handle
5	GT 20009	Spring -- Tension	26	GT 18765	Notch Bar
6	GT 22177	Pivot Bush	27	GT 608	Slide Bush
7	GT 1023	Adjusting Screw	28	GT 18760	Bracket
8	GT 22480	Brake Pedal	29	GT 23	Washer
9	GT 22485	Brake Arm 34" model	30	GT 579	Wave Washer
9	GT 22545	Brake Arm 32" model	31	GT 22043	Bearing Adaptor
10	GT 22490	Brake Rod	32	GT 2602	V Pulley Complete
11	GT 22475	Pivot Assy	33	GT 1012	Washer
12	GT 22474	Link	34	GT 7308	Anchor -- Spring
13	GT 2046	Crinkle Washer	35	GT 2604	Brake Rubber Pad
14	GT 2010	Cirolip	36	GT 14023	Leaf Spring
15	GT 730	Pivot Bush	37	GT 18980	Handle
16	GT 22176	Washer	38	GT 14341	Shim Washer
17	GT 18313	Pivot Bracket	39	GT 18805	Brake Rod
18	GT 18314	Packer			
19	GT 18820	Height Adjuster Shaft			
20	GT 20006	Spring -- Tension			
21	GT 18775	Tensioner			

**PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.**


Engine and Electrical:

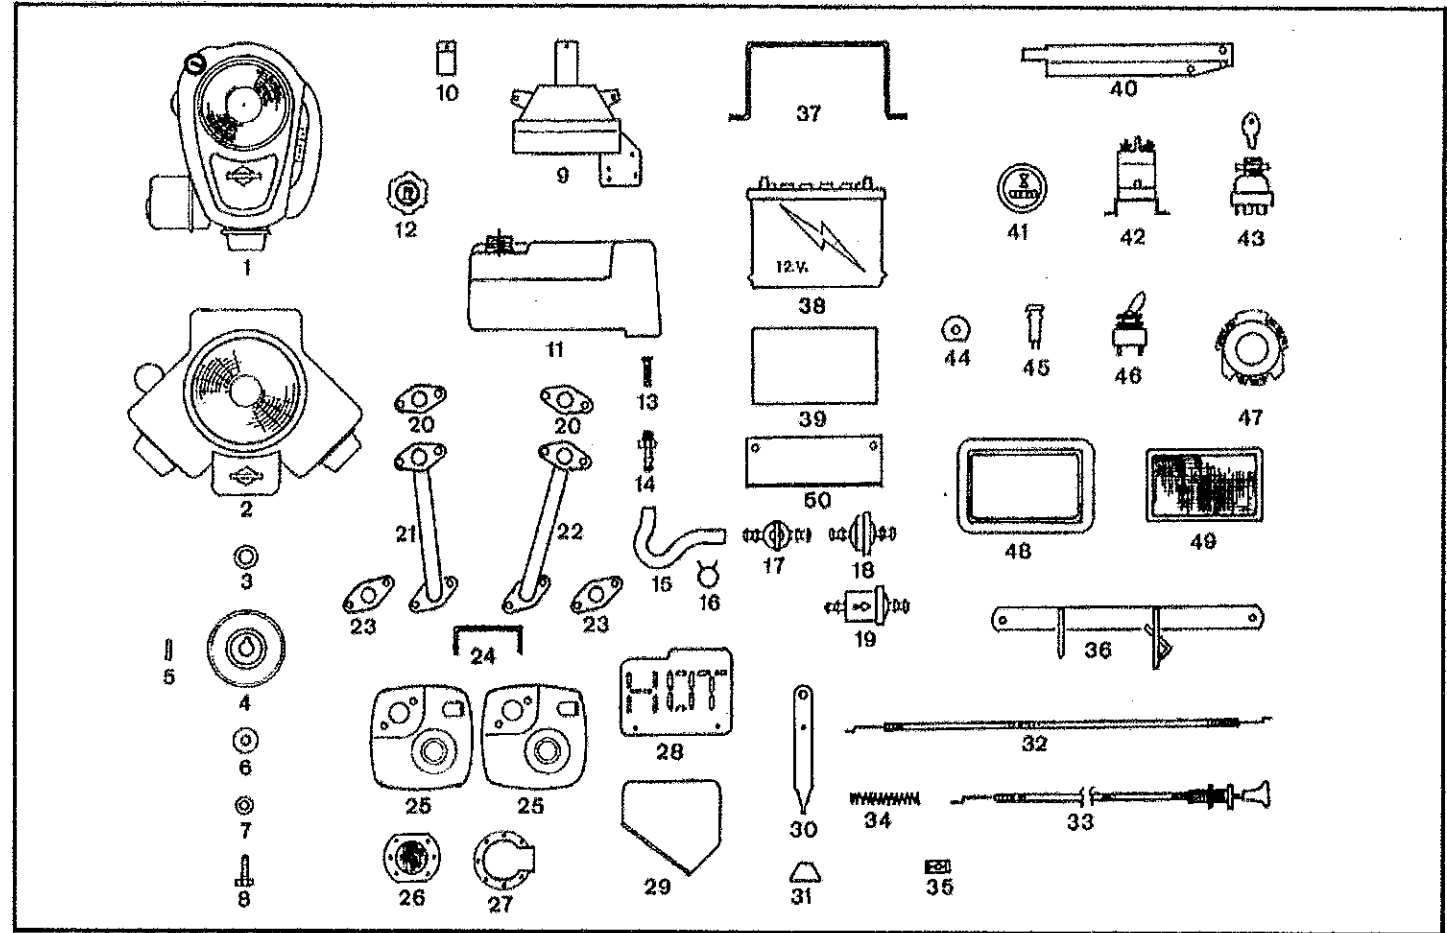

INDEX PART NO.	DESCRIPTION	INDEX PART NO.	DESCRIPTION
1 13 - 21	HP Single Cylinder Engine	26 GT 20067	Spark Arrester
2 20 - 30	HP Twin Cylinder Engine	27 GT 20065R	Exhaust Outlet
3 GT 18047	Crankshaft Spacer - Single Cylinder	28 GT 20213	Heat Shield R.H. Exhaust Pipe
3 GT 20058	Crankshaft Spacer - Twin Cylinder	29 GT 23181	Heat Shield L.H. Foot Rest
4 GT 22049	Pulley - Engine	30 GT 20169	Throttle Lever
5 GT 5542	Key	31 GT 2026	Knob - Throttle Lever
6 GT 3192	Washer	32 GT 20913	Throttle Cable - Single Cylinder
7 GT 2511	Cone Washer	32 GT 20957	Throttle Cable - Twin Cylinder
8 GT 2508	Bolt	33 GT 20057	Choke Cable - Where Fitted
9 GT 22412	Support - Fuel Tank	34 GT 20083	Spring - Choke Return
10 GT 20194	Clamp - Fuel Tank	35 GT 1252	Cable Clamp
11 GT 2579	Fuel Tank - Bare	36 GT 22455	Cutter Clutch Retainer
12 GT 2249	Cap - Fuel Tank	37 GT 22184	Battery Clamp
13 GT 20185	Gauze Strainer	38 GT 2362	Battery
14 GT 2252	Hose Tail	39 GT 14336	Rubber Mat - Battery
15 RM 907	Fuel Hose x 1m Length	40 GT 20176	Support - Electric Harness
16 GT 2221	Hose Clamp	41 GT 6084	Hour Meter
17 GT 2215	Fuel Tap	42 GT 2220	Solenoid - Starter Motor
18 GT 2309	Fuel Filter - Single Cylinder	43 GT 2329	Off-On-Start - Key Switch
19 GT 2310	Fuel Filter - Twin Cylinder	44 GT 12345	Insulator - Battery Positive Pole
20 GT 20068	Gasket - Engine/ Exhaust	45 GT 2275	Oil Failure Light
21 GT 20555	Exhaust Pipe R.H. Side	46 GT 2274	Light Switch
22 GT 20560	Exhaust Pipe L.H. Side	47 GT 2388	Seat Safety Switch
23 GT 20063	Gasket - Exhaust/ Muffler	48 GT 20056	Rubber Headlight Surround
24 GT 22160	Muffler Support Bracket	49 GT 20055	Headlight
25 GT 20061	Muffler	50 GT 22171	Battery Retainer

**PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.**


Drive Clutch and Rear Axle:

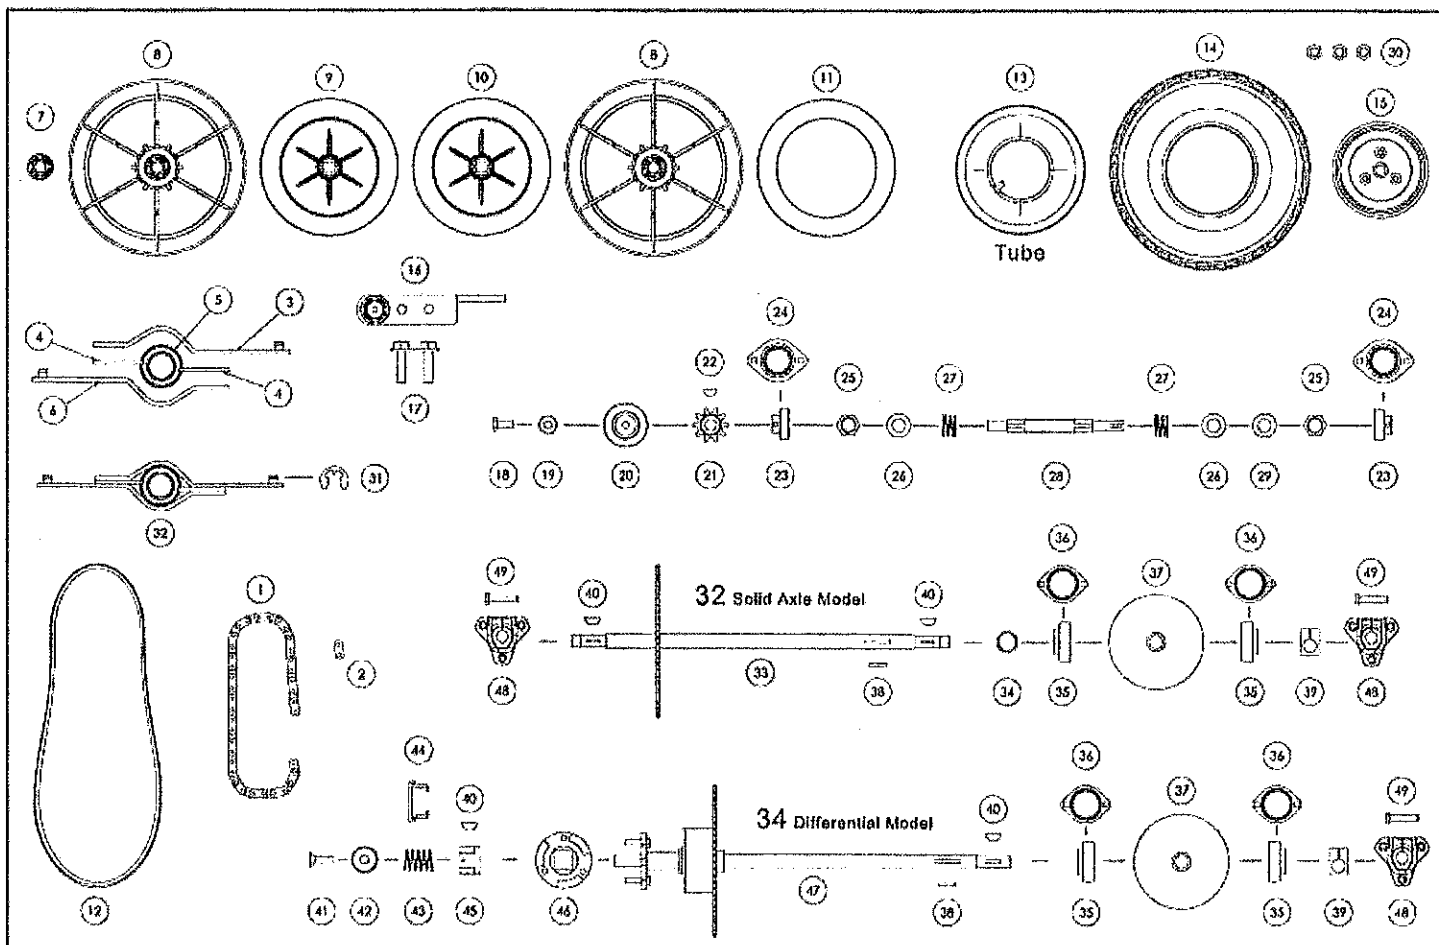

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	GT 18006	Roller Chain	25	GT 347	Nut
2	GT 501	Connecting Link	26	GT 7303	Washer
3	GT 20510	Yoke - Top Half	27	GT 357	Spring
4	GT 20191	Retainer	28	GT 18031	Drive Shaft
5	GT 20935	Clutch Bearing Unit	29	GT 539	Shim
6	GT 20515	Yoke - Bottom Half	30	GT 2861	Wheel Nut
7	GT 2206	Ball Bearing - Clutch Pulley	31	GT 2036	Spring Clip
8	GT 920	Clutch Pulley Complete	32	GT 20945	Yoke Unit
9	GT 6855	L.H. Drive Plate Complete	33	GT 22014	Rear Axle & Sprocket - 32" Model
10	GT 6855	R.H. Drive Plate Complete	34	GT 18310	Spacer
11	GT 6012	Clutch Lining	35	GT 390	Ball Bearing
12	GT 2354	V Belt - Drive	36	GT 7083	Bearing Plate
13	GT 2583	Tube - 32" Model	37	GT 18660	Brake Disc
14	GT 2580	Tyre - 32" Model	38	GT 12093	Key
14	GT 2581	Tyre - 34" Model	39	GT 7032	Clamp
15	GT 1624	Wheel Hub	40	GT 516	Key
15	GT 2929	Wheel Hub - 34" Model L.H.	41	GT 2425	Screw
16	GT 22943	Chain Adjuster Unit	42	GT 10488	Spring Retainer
17	GT 22470	Retainer - Chain Adjuster	43	GT 2958	Spring
18	GT 1455	Set screw	44	GT 2957	Handle
19	GT 2542	Cone Washer	45	GT 2956	Engagement Block
20	GT 18334	Disc - Chain Guard - 32" Model	46	GT 2868	Engagement Plate
21	GT 12102	10 Tooth Sprocket	47	GT 2850	Rear Axle & Differential - 34" Model
22	GT 517	Key	48	GT 1625	Wheel Flange
23	GT 392	Ball Bearing - Drive Shaft	49	GT 2517	Bolt
24	GT 7017	Bearing Plates			

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.


Steering and Front Axle:

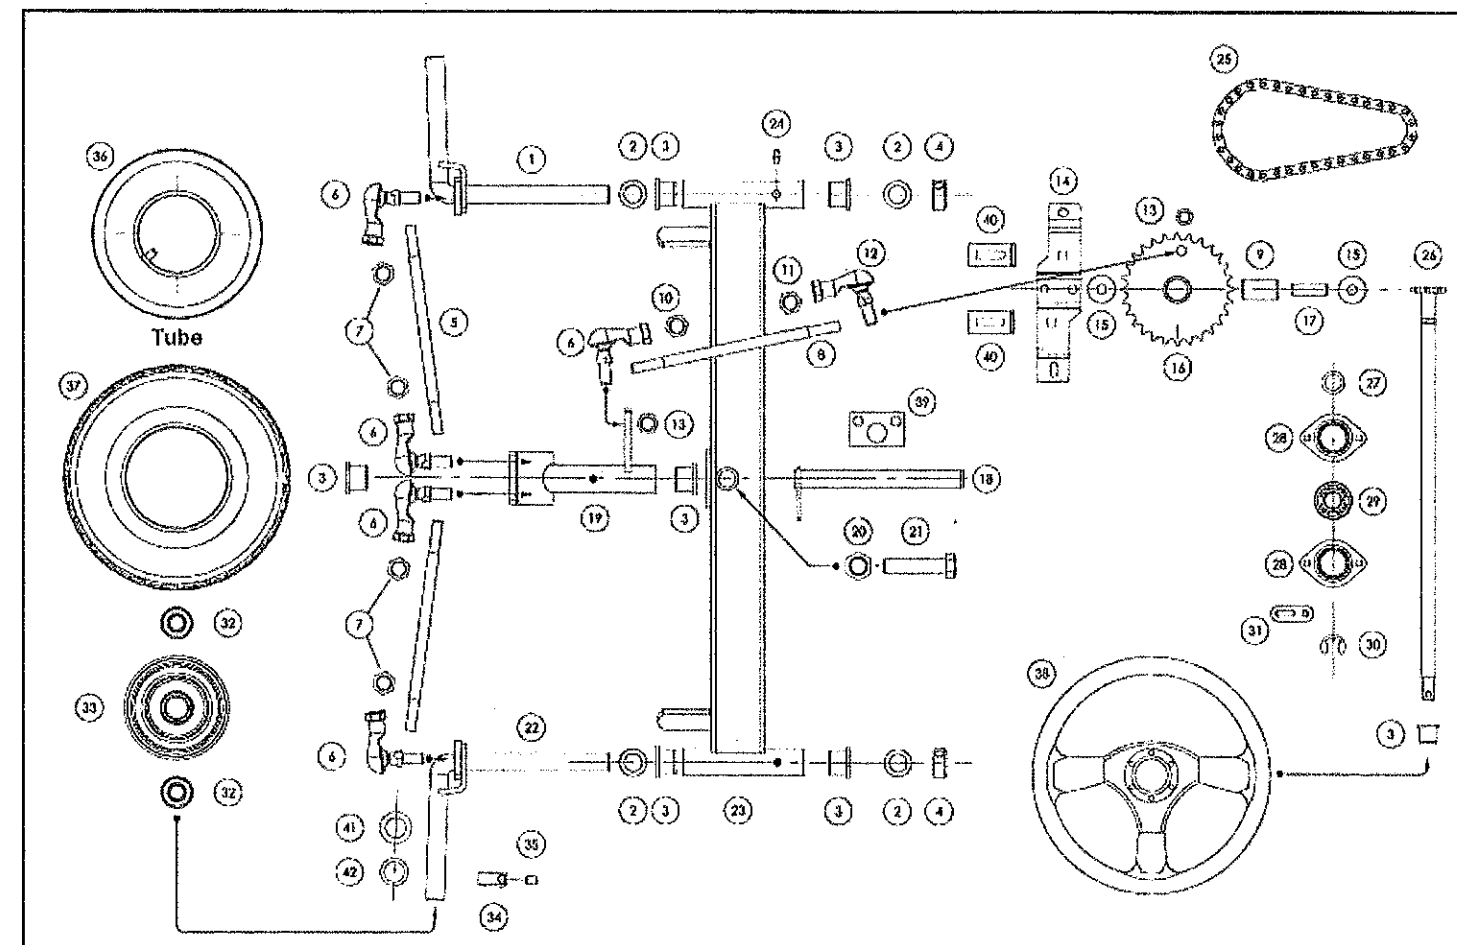

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	GT 20540	R.H. King Pin	23	GT 21345	Axle Beam - 32" Model
2	GT 7304	Washer	23	GT 20530	Axle Beam - 34" Model
3	GT 1766	Bush	24	GT 1924	Grease Nipple
4	GT 7009	Collar	25	GT 13813	Roller Chain Complete
5	GT 18078	Tie Rod - 32" Model	26	GT 18880	Steering Shaft
5	GT 20052	Tie Rod - 34" Model	27	GT 20018	Spacer
6	GT 6044	Tie Rod End	28	GT 7017	Bearing Plate
7	GT 2406	Lock Nut	29	GT 7010	Ball Bearing
8	GT 22003	Rod - Steering Link	30	GT 2470	Circlip
9	GT 22032	Bronze Bush	31	GT 18324	Locking Tab
10	GT 2406	Lock Nut	32	GT 396	Ball Bearing - Wheel Hub
11	GT 2295	Lock Nut L.H. Thread	33	GT 7007UP	Wheel Hub Aluminium 32" Model
12	GT 2294	Tie Rod End - L.H. Thread	33	GT 7007	Wheel Hub Powder Coated 34" Model
13	GT 2090	Nyloc Nut	34	GT 7009	Collar
14	GT 18329	Support	35	GT 520	Socket Grub Screw
15	GT 2483	Brass Washer	36	GT 456	Tube - 32" Model
16	GT 22555	Chain Wheel	36	GT 1341	Tube - 34" Model
17	GT 22033	Bush	37	GT 455	Tyre - 32" Model
18	GT 18645	Pivot Pin	37	GT 2361	Tyre - 34" Model
19	GT 20550	Steering Crank	38	GT 2582	Steering Wheel
20	GT 2042	Nyloc Nut	39	GT 22150	Reinforcing Plate
21	GT 2476	Bolt	40	GT 18317	Steering Stops
22	GT 20545	L.H. King Pin	41	GT 7304	Washer
			42	GT 22185	Bush

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.


Cutter Deck:

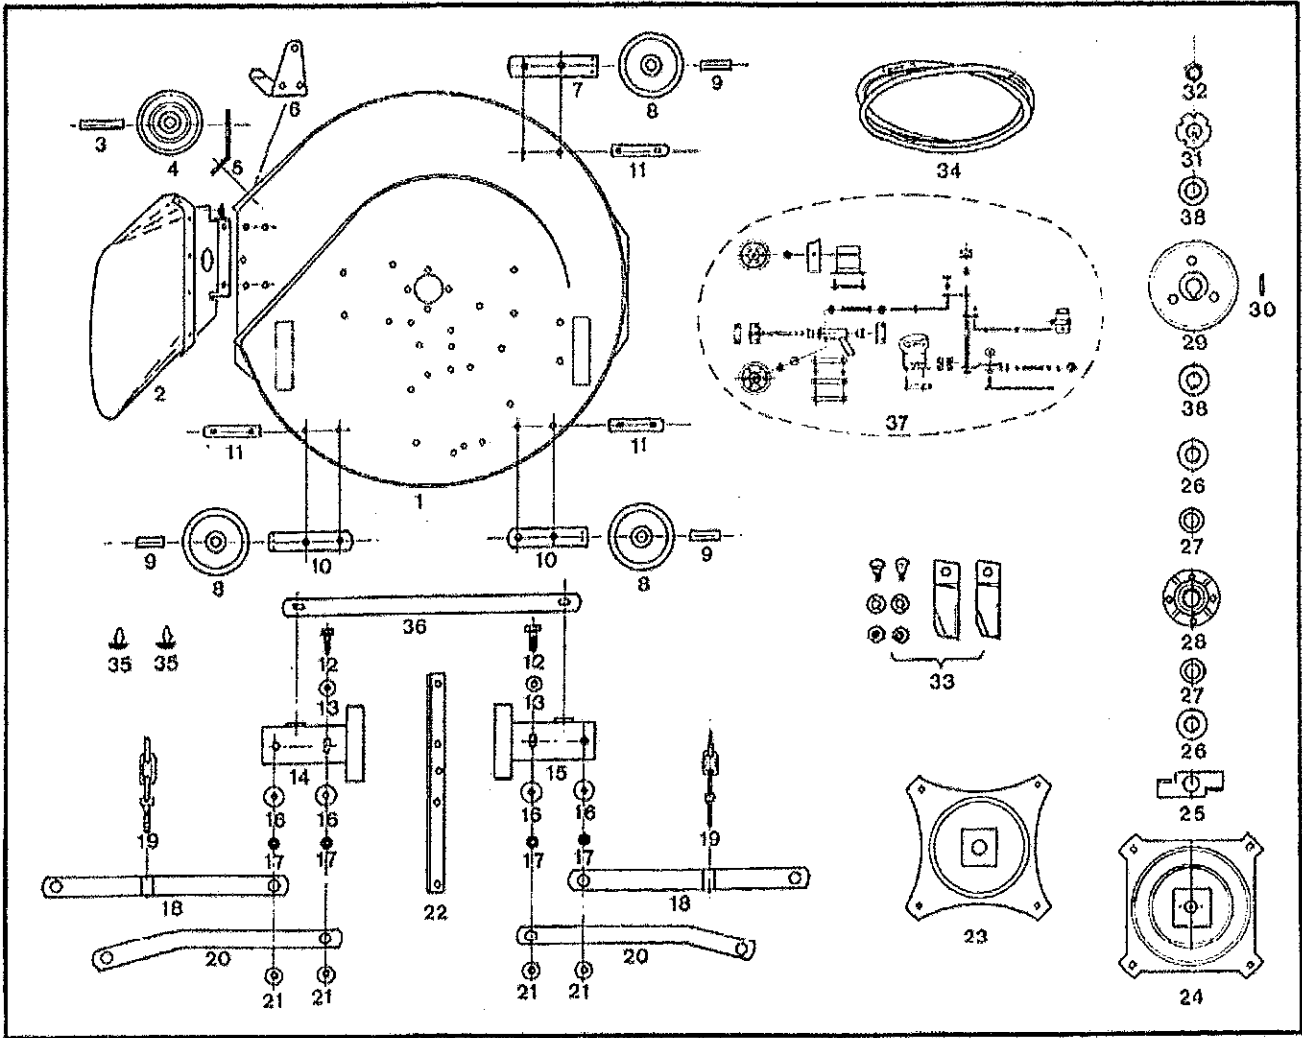

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	GT 22158	32" Cutter Deck Drilled Casting	19	GT 18975	Chain - Adjust
1	GT 20162	34" Cutter Deck Drilled Casting	20	GT 22159	Bottom Link
2	GT 20936	Stone Guard	21	GT 1012	Washer
3	GT 20049	Bush	22	GT 20192	Stiffener - 34" Only
4	GT 2263	Domed Jockey Wheel - 34" Only	23	GT 13025	32" Cutter Disc & Spindle
5	GT 20180	Bracket	24	GT 20285	34" Cutter Disc & Spindle
6	GT 14392	Skid - Deck - 32" Only	25	GT 8205	Bearing Protector
7	GT 20166	Bracket - 34" Only	26	GT 589	Bearing Shield
8	GT 2264	Jockey Wheel	27	GT 635	Spacer
9	GT 22005	Bush	28	GT 13815	Spindle Housing Complete
10	GT 12362	Bracket	29	GT 22011	"V" Pulley
11	GT 21160	Retainer	30	GT 14047	Key
12	GT 3	Bolt	31	GT 14390	Tab Washer
13	GT 1567	Cone Washer	32	GT 2003	Nut M20 L.H.
14	GT 20610	L.H. Side Plate	33	GT 2139	Blade And Bolt Set
15	GT 20605	R.H. Side Plate	34	GT 2365	V Belt - Cutters
16	GT 579	Wave Washer	35	GT 1760	Nylon Button
17	GT 730	Bush	36	GT 20223	Spreader
18	GT 18965	Top Link	37	Idler Pulleys	See separate page for component No.'s
			38	GT 2393	Domed Spring Washer

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.

Body Work and Seat:

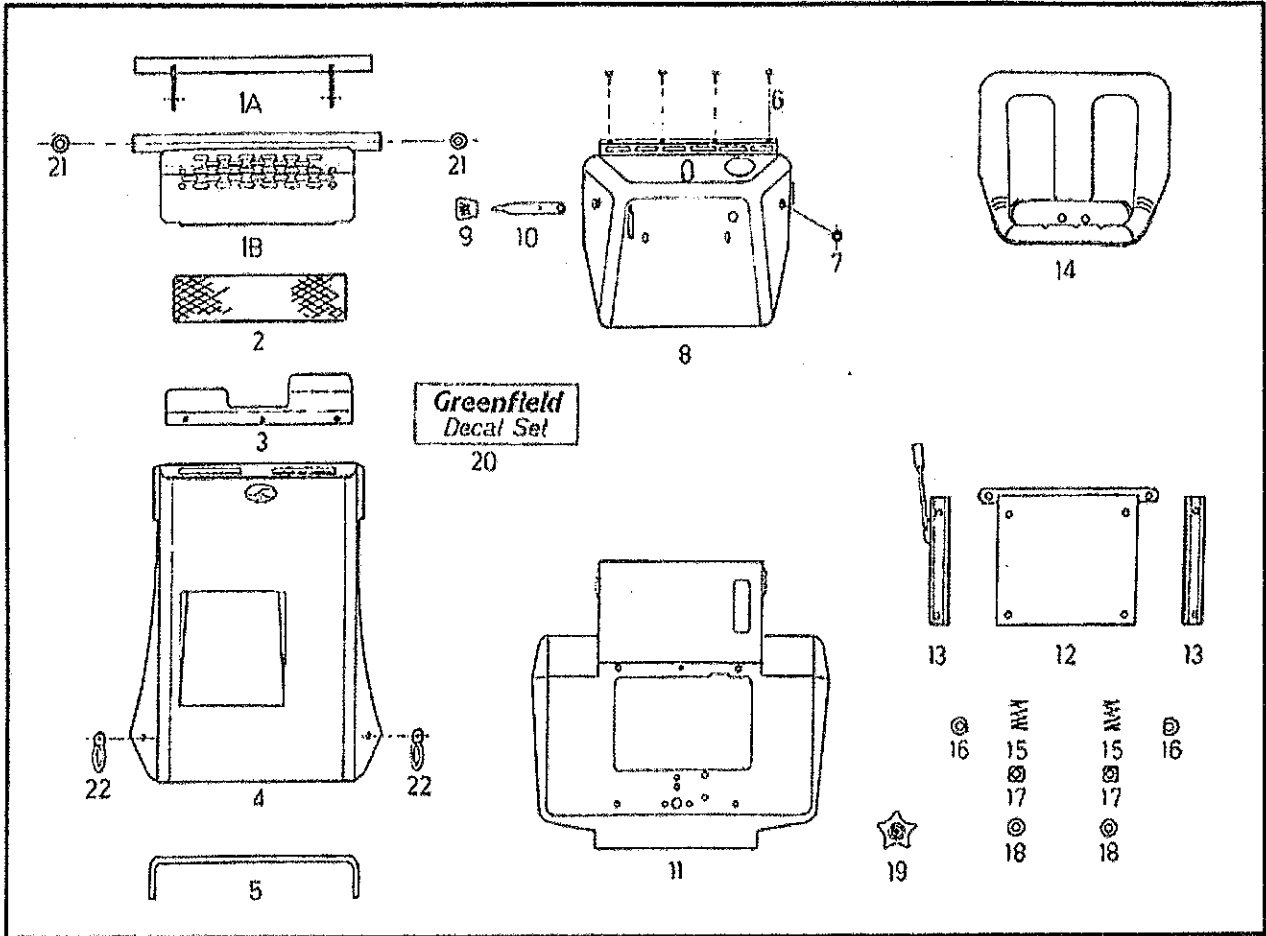

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1 A	GT 22415	Front Bumper - Single Cyl	12	GT 21340	Hinged Seat Base
1 B	GT 20570	Muffler Guard/Bumper - Twin Cyl	13	GT 2367	Seat Runners (set)
2	GT 22163	Grille - 32" Model Only	14	GT 2366	Seat
3	GT 22162	Heat Shield - Head Lights Single Cyl	15	GT 14050	Spring
3	GT 22161	Heat Shield - Head Lights Twin Cyl	16	GT 10452	Clamp
4	GT 22320	Bonnet	17	GT 10451	Locating Block
5	RM 906 x 1m	Pinchweld - Front or Rear	18	GT 1660	Washer
6	GT 6094	Buffer Grommet	19	GD 5545	Knob - Rear Cover
7	GT 2254	Bobbin - Strap	20	GT 22046	Decal Sheet 32" Model
8	GT 20450	Steering Cowl	20	GT 22041	Decal Sheet 34" Model
9	GT 2026	Knob - Throttle Lever	21	GT 6081	Plastic Bung - Bumper Bar
10	GT 20169	Lever - Throttle	22	GT 7015	Strap - Bonnet Hold Down
11	GT 18670	Rear Cover			

NOTE: Body panels are bare items painted.

PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
STANDARD HARDWARE ITEMS NOT SHOWN.

WARRANTY

PRIVATE / DOMESTIC USE

Greenfield Mowers Pty Ltd, the manufacturer warrants all Greenfield ride on mowers used in domestic applications to be free of faulty workmanship and material only, for a period of twenty four (24) months from the date of sale to the original purchaser. An additional thirty six (36) months conditional warranty is optional on all machines used in domestic applications and still owned by the original purchaser.

The optional warranty is conditional on:

1. The supplied warranty registration card being completed and returned to Greenfield within 14 days of the date of purchase.
2. Regular servicing being performed by an authorized Greenfield dealer as per Greenfield recommendations (the initial 5 hour service and then every 6 months or 50 hours whichever comes first).
3. The service card showing the programmed services have been performed and is presented when warranty is requested. If over 2 years a copy of the service booklet may be requested.
4. The machine hours being less than 500 hours.
5. Any claim on the warranty must be notified to the authorised Greenfield dealer from whom you bought the mower or, if he is not reasonably close to you when you make your claim, then to any authorised Greenfield dealer conveniently close to you. You must give proof of purchase of the mower and provide the dealer with all information you can and which the dealer might reasonably require about your claim including where possible the claimed defective part.
6. If the dealer requires, you must take the mower (or part) to him for checking when making your claim.
7. Subject to approval by Greenfield Mowers, the dealer may in his discretion pay reimbursement towards your actual costs of making the defect claim. Any such claim must be supported by all appropriate documentation the dealer may reasonably require from you.
8. The dealer will deal with any part found to be defective subject to the terms of this warranty and exclusions provided for at law or by statute.
9. If you have any concerns about the processing of your warranty claim by the dealer you should contact us at any of the address, email address, facsimile number or telephone number shown on this warranty form. Enquiries to us should be directed to our Production Manager.
10. The benefits given to you by our warranty are in addition to other rights and remedies of a consumer under a law in relation to the goods or services to which our warranty relates.
11. Our products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and if failure does not amount to a major failure.

COMMERCIAL USE

Greenfield commercial warranty covers owner operated machines used in commercial, institutional and contracting situations. All Greenfield ride-on mowers used for commercial use are guaranteed to be free of faulty workmanship and material only, for a period of three (3) months from date of sale to the original purchaser. This warranty does not cover machines hired out or machines used by staff in any of the prementioned situations.

Exclusions to the Greenfield Mowers Pty Ltd (Greenfield) warranty on all machines are:

Fair wear and tear, V Belts, Tyres, Tubes, Blades, Blade Bolts, Blade Holder, Brake Pads, Damage caused by Misuse, Neglect, Accident, use of non-genuine parts and repairs attempted by anyone other than an authorized Greenfield dealer.

Engine and battery warranty are covered by the respective manufacturers.

The benefits conferred by the above warranty are in addition to all other rights and remedies in respect of the product which the customer has under existing laws in Australia and New Zealand.

Greenfield Mowers Pty Ltd, the manufacturer reserves the right to change parts and specifications without notice.

To register for the 36 month extended warranty, please fill in the enclosed warranty/survey registration card. When we receive this card you will receive in return a warranty acknowledgement.



30 Fox Rd Acacia Ridge QLD 4110
PO box 155 Archerfield QLD 4108
www.greenfieldmowers.com.au

P 07 3875 9400
F 07 3875 9426
info@greenfieldmowers.com.au



IMPORTANT NOTICE REGARDING ELECTROMAGNETIC CLUTCH FITTED TO YOUR GREENFIELD MOWER

Burnishing in of the clutch is important to increase the life of the Electromagnetic Cutter clutch.

Please follow these instructions:

To burnish a clutch, reduce the engine speed to about half, cycle clutch on and off with the cutter engage switch on the dash panel. A typical burnishing time will take anywhere from 5 to 30 cycles depending upon inertia. The burnishing frequency should be done at 2 to 6 cycles per minute.

USING THE BLADE CLUTCH

The blade clutch switch is located on the right hand side of the dash panel. To engage the cutter blades, pull the switch up. To disengage the cutter blades push the switch down.

Spare Part Numbers:

Electric Cutter Clutch	GT02619
Engine Pulley	GT22049
Key	GD05542
Cutter Clutch Retainer	GT22455
Cutter switch	GT02618

Please note items 6 to 10 and 19 to 30 on page 19 are not used on this model.